ORDER NO. AD8807200C2

Service Manual

Receiver

QUARTZ Synthesizer
AM/FM Stereo Receiver

SA-R330

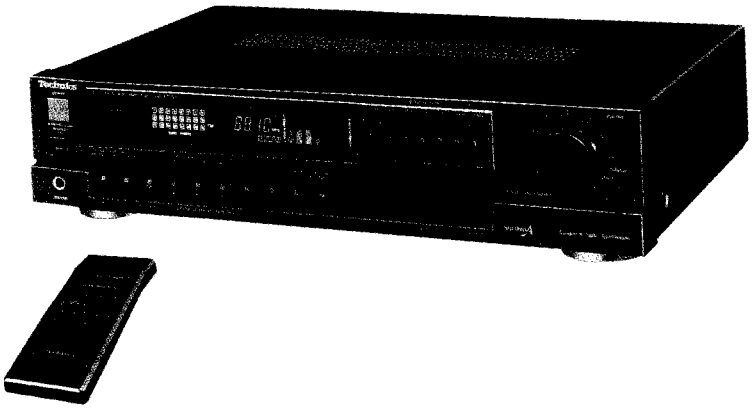

Color

(K)...Black Type

Area

Color	Area
(K)	(EG).....F.R. Germany.

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

Power output	
DIN 1kHz	2×70W (8Ω)
20Hz~20kHz continuous power output both channels driven	2×60W (8Ω)
Total harmonic distortion	
rated power at 20Hz~20kHz	0.008% (8Ω)
half power at 1kHz	0.003% (8Ω)
Intermodulation distortion rated power at 60Hz: 7kHz=4: 1, SMPTE, 8Ω	0.5%
Power bandwidth both channels driven, −3dB	10Hz~40kHz (8Ω)
Damping factor	20 (8Ω)
Input sensitivity and impedance	
PHONO	3mV/47kΩ
CD, VCR 1, TAPE/VCR 2	200mV/22kΩ
PHONO maximum input voltage (1kHz, RMS)	150mV
S/N	
rated power (8Ω)	
PHONO	70dB (IHF, A: 80dB)
CD, VCR 1, TAPE/VCR 2	80dB (IHF, A: 90dB)
Frequency response	
PHONO	RIAA standard curve ±0.8dB (30Hz~15kHz)
CD, VCR 1, TAPE/VCR 2	7Hz~70kHz (±3dB)
7 band graphic equalizer	63Hz, −10dB~+10dB
	160Hz, −10dB~+10dB
	400Hz, −10dB~+10dB
	1kHz, −10dB~+10dB
	2.5kHz, −10dB~+10dB
	6.3kHz, −10dB~+10dB
	12.5kHz, −10dB~+10dB
Loudness control (volume at −30dB)	50 Hz, +9dB
Output voltage	
VCR 1, TAPE/VCR 2 REC OUT	200mV
Channel balance, 250Hz~6,300Hz	±1dB
Channel separation	55dB
Headphones output level and impedance	510mV/330Ω
Load impedance	
MAIN or REMOTE	4Ω~16Ω
MAIN and REMOTE	8Ω~16Ω

■ FM TUNER SECTION

Frequency range	87.50~108.00MHz
Sensitivity	
S/N 30dB	1.5μV (75Ω)
S/N 26dB	1.3μV (75Ω)
S/N 20dB	1.2μV (75Ω)
IHF usable sensitivity	1.5μV (IHF '58, 75Ω)
IHF 46dB stereo quieting sensitivity	22μV/75Ω
Total harmonic distortion	
MONO	0.2%
STEREO	0.3%
S/N	
MONO	60dB (75dB, IHF)
STEREO	58dB (71dB, IHF)
Frequency response	20Hz~15kHz, +1dB~−2dB
Alternate channel selectivity	±400kHz, 65dB
Capture ratio	1.0dB
Image rejection at 98MHz	40dB
IF rejection at 98MHz	70dB
Spurious response rejection at 98MHz	70dB
AM suppression	50dB

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 531-91, Japan

Stereo separation 1kHz	40dB
10kHz	30dB
Carrier leak 19kHz	−60dB (−65dB, IHF)
38kHz	−70dB (−75dB, IHF)
Channel balance (250Hz~6,300Hz)	±1.5dB
Limiting point	1.2μV
Bandwidth	
IF amplifier	180kHz
FM demodulator	1000kHz
Antenna terminals	75Ω (unbalanced)

■ AM TUNER SECTION

Frequency range	522~1611kHz (9kHz-steps) 530~1620kHz (10kHz-steps)
Sensitivity (S/N 20dB)	20μV, 330μV/m
Selectivity at 999kHz	55dB
Image rejection at 999kHz	40dB
IF rejection at 999kHz	55dB

■ GENERAL

Power consumption	440W
Power supply	AC 50Hz/60Hz, 220V
Dimensions (W × H × D)	430 × 102 × 290mm (16-15/16" × 4" × 11-1/4")
Weight	6.7kg (14.8lb.)

Notes:

1. Specifications are subject to change without notice. Weight and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

■ CONTENTS

	Page
ACCESSORIES	2
LOCATION OF CONTROLS	3~5
CONNECTIONS	6, 7
PROTECTION CIRCUITRY	7
BEFORE REPAIR AND ADJUSTMENT	7
DISASSEMBLY INSTRUCTIONS	8~10
MEASUREMENTS AND ADJUSTMENTS	11, 12
FUNCTION OF TERMINAL	13, 14
RESISTORS & CAPACITORS	15~17
REPLACEMENT PARTS LIST	18, 19
SCHEMATIC DIAGRAM OF REMOTE-CONTROL TRANSMITTER	20, 21
BLOCK DIAGRAM	22~24
DESCRIPTION OF FLUORESCENT DISPLAY	25
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	26
PRINTED CIRCUIT BOARDS	27~30
WIRING CONNECTION DIAGRAM	31
SCHEMATIC DIAGRAM	32~38
CABINET PARTS LOCATION	39, 40
REPLACEMENT PARTS LIST	41
REMOTE-CONTROL PARTS LOCATION	42
REPLACEMENT PARTS LIST	42

■ ACCESSORIES

- FM indoor antenna (1) (SSA270M)



- AM loop antenna (1) (SPB1162T)

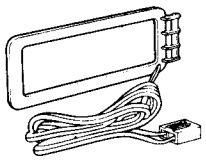

- AM antenna holders (2)



(SMA233-1M) (SMA231M)

- Screws (2)

(XTN3+10AFZ)

- Connection cable for remote-control (1) (SJP2257T)



- Flat cable for remote-control (1) (SWKST11M-1)

- Remote-control transmitter (1)

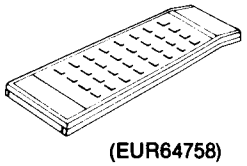

(EUR64758)

- Batteries (2) (UM-4NE/2S)

D

■ LOCATION OF CONTROLS

Amplifier section

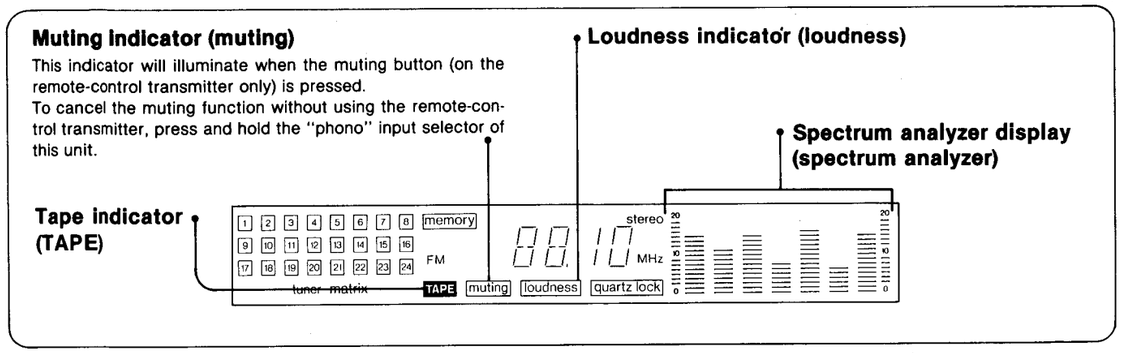

Muting indicator (muting)
This indicator will illuminate when the muting button (on the remote-control transmitter only) is pressed.
To cancel the muting function without using the remote-control transmitter, press and hold the "phono" input selector of this unit.

Loudness indicator (loudness)

Spectrum analyzer display (spectrum analyzer)

Tape indicator (TAPE)

Power "standby ⏻, on" switch (power "standby ⏻, on")
This switch switches ON and OFF the secondary circuit power only. The unit is in the "standby" condition when this switch is set to the "standby ⏻" position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

Equalizer controls (graphic equalizer)
These controls are used to adjust the levels within each frequency band. The levels can be varied continuously over a range of +10 dB~−10 dB. By sliding the controls at each of the indicated frequencies in the "+" direction, the frequencies in that band are boosted, and by sliding them in the "−" direction, the frequencies in that band are attenuated.
When the power switch is set to the "on" position, the tips of these level controls will illuminate.

Remote-control signal sensor (remote sensor)

Loudness switch (loudness)
Set to the "on" position (The loudness indicator will illuminate.) when listening to music at low volume. Auditory perception of sound in the low frequency range falls off at low volume but when the switch is in this position, this deficiency is compensated for, so that the full impact of the musical performance can be enjoyed.

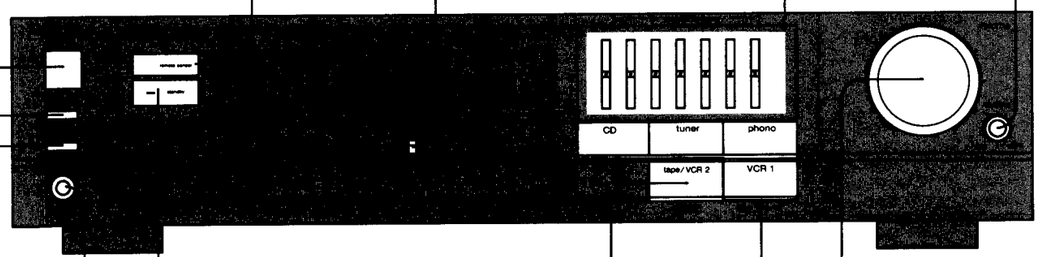

Balance control (balance)

"standby ⏻" indicator
This indicator will illuminate when the unit is switched to the standby condition by the power "standby ⏻/on" switch on the unit or the ON/OFF switch on the remote-control transmitter.

Headphones jack (phones)

Speaker selectors (speakers)
These selectors are used to switch the speaker systems ON and OFF.

Tape-monitor switch (monitor)
Press this button to listen to tape.
No other sources selected by the input selector can be heard while the tape indicator is illuminated. To listen to some other source, press this button once again.

Volume-control/indicator (volume)
The indicator will move in accordance with the volume level.

Input selectors (input selector)
These selectors are used to select the sound source to be heard, such as a disc, radio broadcast, etc.
The selected sound is shown on the audio input selector/frequency display.

Tuner section

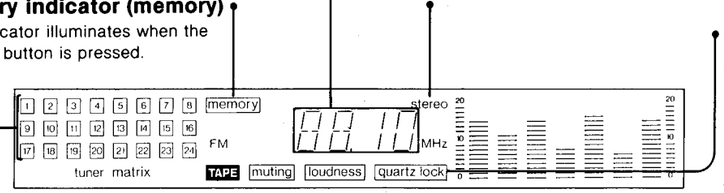

Audio input selector/frequency display (audio input selector/frequency)

FM stereo indicator (stereo)
This indicator automatically illuminates when an FM stereo broadcast is being received.
Note: It will not illuminate if the FM mode selector is pressed.

Memory indicator (memory)
This indicator illuminates when the memory button is pressed.

Quartz-lock indicator (quartz lock)
This indicator illuminates when tuned precisely to an FM or AM station.

Preset channel matrix display (tuner matrix)

FM mode selector (FM mode)
This unit automatically switches to the stereo mode when a stereo broadcast is received. Press this selector to listen in the monaural mode. The stereo indicator will not illuminate in the monaural mode.

Group select button (select)

Assort-mode select button (assort)

Change-mode select button (change)

Character-input/tuning buttons (character/tuning)

Memory button (memory)
This button is used when preset memory setting of the preset-tuning buttons is made.

Preset tuning buttons (1~0) (24 channel random preset tuning)
These buttons are used to preset FM and AM broadcast frequencies into the memory of this unit, and are also pressed to select the desired preset frequencies.
Note:
The buttons marked [3] ~ [6] are also used to listen to radio broadcasts arranged in convenient groups.

Memory-scan/group-search button (-M. scan/–group search)

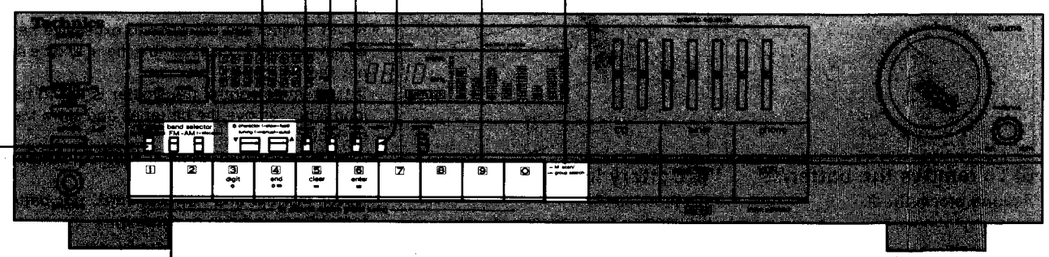

Band selectors (band selector)



FM: Press this button to listen to an FM broadcast.
AM: Press this button to listen to an AM broadcast.
allocation:
When the AM button is pressed for about 4 seconds, the AM frequency step will change to 10 kHz per step. (This step is set to 9 kHz before shipment.) In order to return to the original frequency indication, press this button for about 4 seconds again.

• **Remote-control transmitter (EUR64758)**

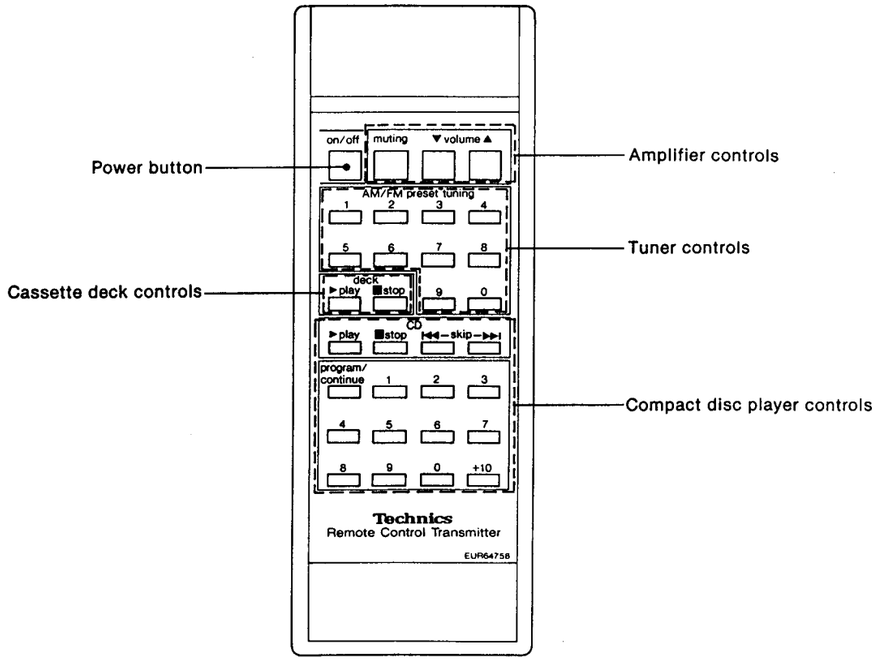

Insertion of remote-control transmitter batteries

1 Open the cover.

Bottom panel of remote-control transmitter

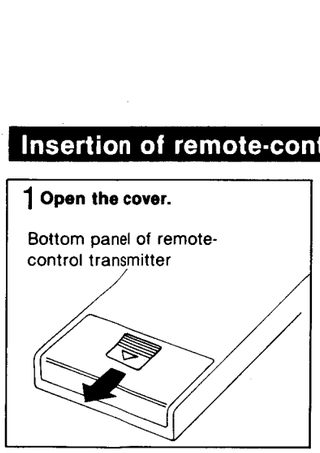

2 Insert the batteries and close the cover.

Use two AAA [R03(UM-4): 1.5 V] batteries.

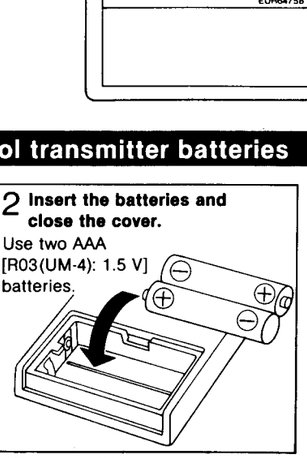

■To remove the batteries

Reverse procedure 2.

■Battery life

About 1 year.
(Depending on frequency of use.)

■Notes concerning use of dry batteries

- Do not use chargeable batteries (Ni-Cd type).
- Be sure the batteries are inserted so that the positive (+) and negative (−) polarities are correct. Batteries installed with incorrect polarities may leak and damage the remote-control transmitter.
- Never subject the batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.
- If the remote-control transmitter is not to be used for a long time, remove the batteries and store them in a cool dark place.
- Always remove old, weak or worn-out batteries promptly and dispose of them properly.
- Never mix old and new batteries, nor batteries of different types (carbon or alkaline).

Operation notes

Use the remote-control transmitter within 6 meters.

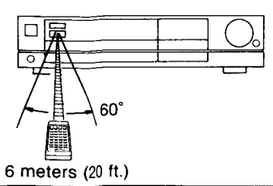

Face it toward the remote-control signal sensor.

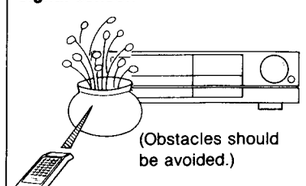

Be sure the transmitter part of the remote-control transmitter and the sensor part of this unit are free from dust. Excessive dust might prevent reception.

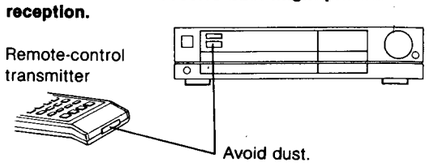

Notes: 1. The control panel of the remote-control transmitter may be covered by a clear plastic protective sheet. This sheet may be removed if desired.
2. If this unit is placed in an audio rack, the distance that the remote control transmitter can be used from might be reduced due to the thickness or color of the glass door.

D

■ CONNECTIONS

• **Connections to equipment**

"PHONO" terminals

Connect a turntable.
Note:
For remote-control operation, be sure to connect the ground wire correctly.

"VCR 1" terminals

Connect a video cassette recorder or an audio tape deck etc. (Refer to the operating instructions of VCR, etc.)

"PRE OUT/MAIN IN" terminals

Do not remove the shorting pins from these terminals unless you plan to use an independent preamplifier or main amplifier. (No sound will be heard if they are removed). To use it in this way, consult the operating instructions for the additional amplifier or preamplifier that you plan to use.

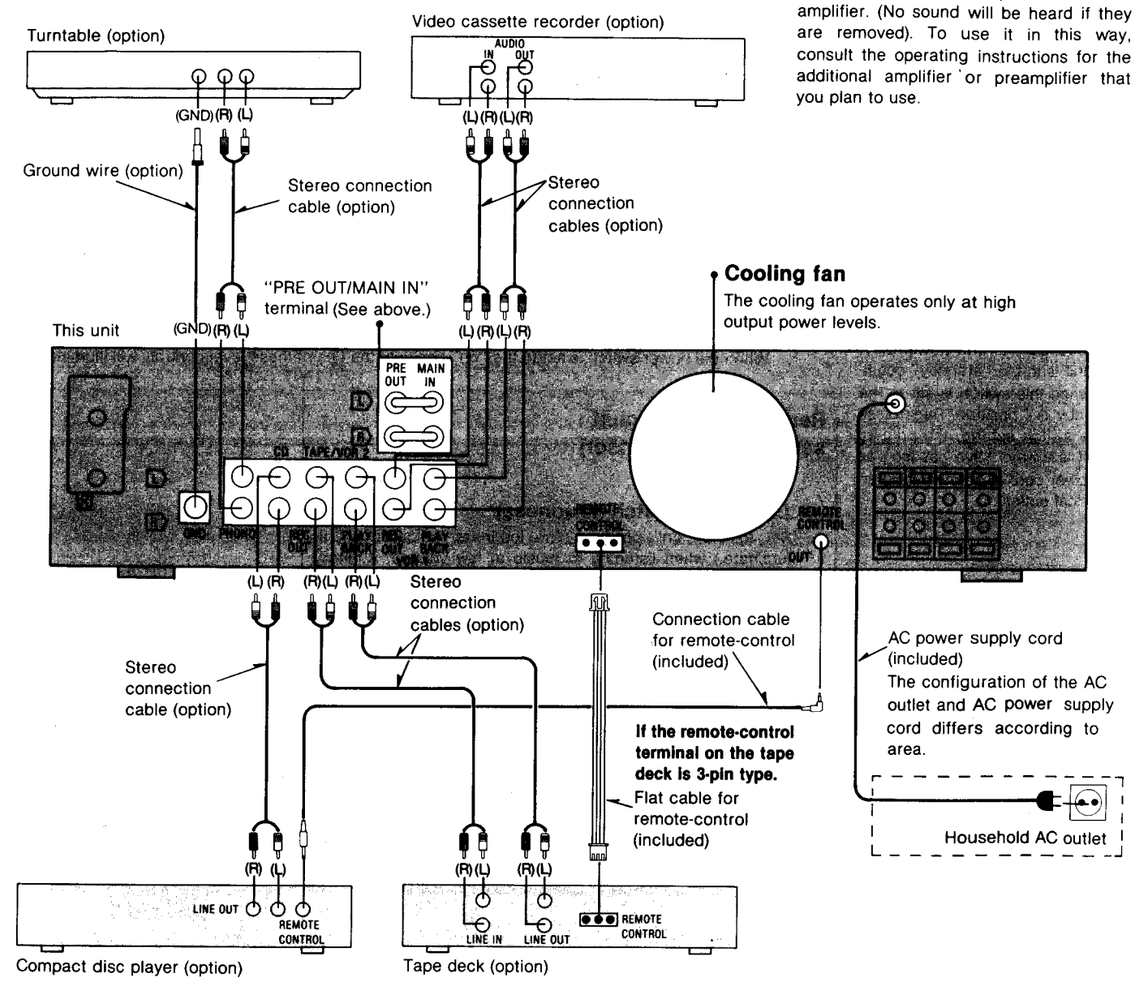

"CD" terminals

Connect a compact disc player.

"TAPE/VCR 2" terminals

Connect a tape deck or second VCR.

If the remote control terminal on the tape deck is 1/8 inch stereo mini-jack.

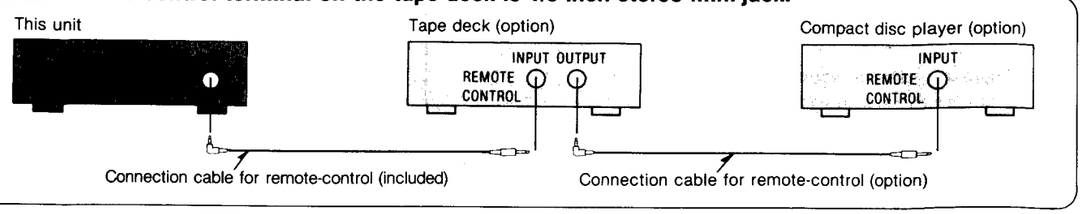

• **Connections to speakers**

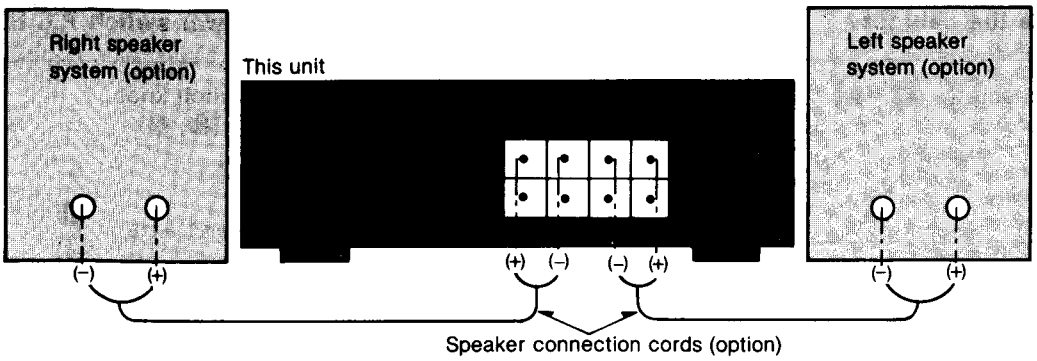

■Load impedance:
MAIN or REMOTE: 4~16 Ω
MAIN and REMOTE: 8~16 Ω

■"REMOTE" terminals
For connection to a second pair of speakers.

Connection of speaker wires

① Twist the core of the speaker wires.
② Lift up the lever, and insert the core until it can no longer be seen.
③ Press down the lever, and pull the cord gently to be sure that it is secure.

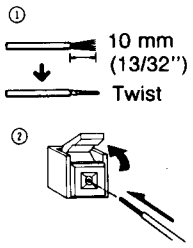

Notes:
1. To prevent damage to circuitry, never short-circuit positive (+) and negative (–) speaker terminals.
2. Be sure to only connect positive (+) cords to positive (+) terminals, and negative (–) cords to negative (–) terminals.
3. Connections of speaker wires should be made before connecting the AC power supply cords.

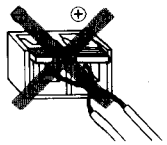

■ PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:
• No sound is heard when the power is turned on.
• Sound stops during a performance.
The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:
1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note:
When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

■ BEFORE REPAIR AND ADJUSTMENT

1. Turn off the power, Discharge both power supply capacitors (C701, C702 8200μF) through a 10Ω 5W resistor to ground. Do not short between C701 and C702. It may damage the capacitors.

2. After completion of repair, slowly apply the primary voltage by using a variac to avoid over current. Current consumption at 50Hz/60Hz in no signal mode should by shown with respect to supply voltage 220V.

Power supply voltage		AC 220V
Consumed current	50/60Hz	170~370mA

■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1	How to remove the cabinet
Procedure 1	1. Remove the 5 screws (❶~❺).

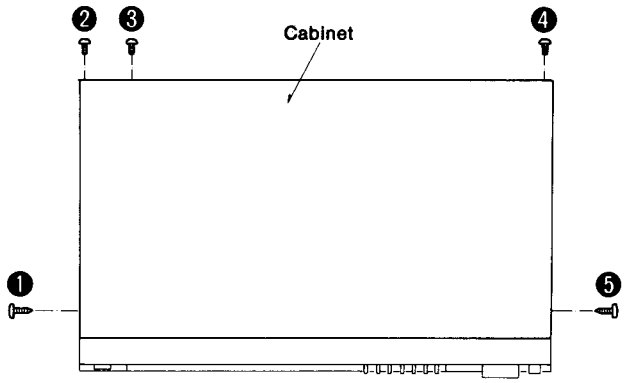

Ref. No. 2	How to remove the front panel
Procedure 1→2	1. Remove the 4 screws (❶~❺). 2. Remove the flat cables (J501 and J502).

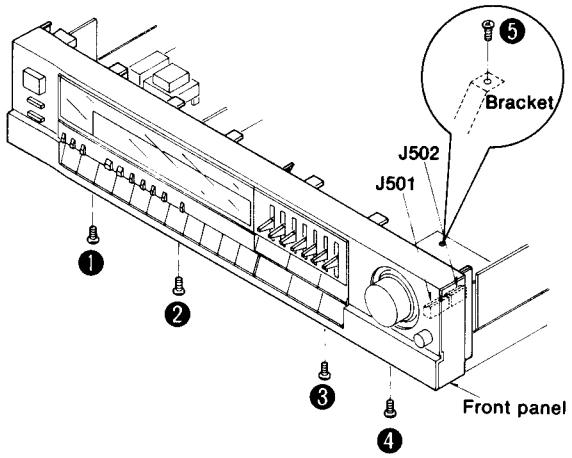

Removing the flat cable

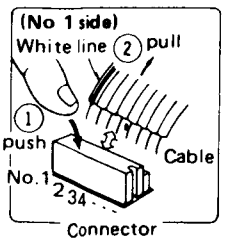

Ref. No. 3	How to remove the power switch P.C.B.
Procedure 1→2→3	1. Remove the power switch knob. 2. Remove the 2 screws (❶, ❷).

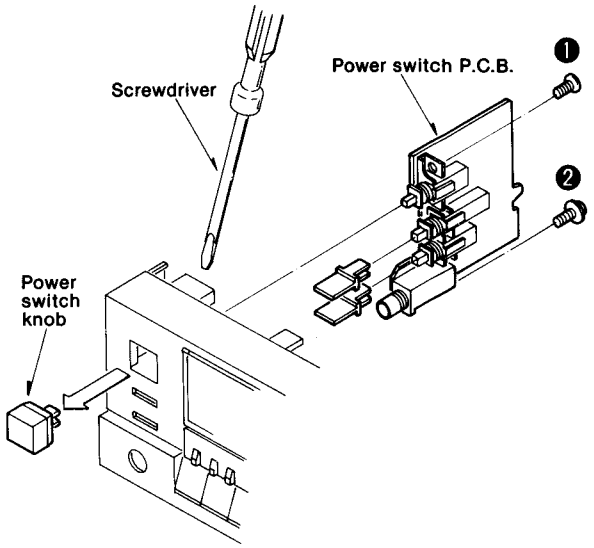

Note: Remove the knob by pushing it from behind the panel.

Ref. No. 4	How to remove the FL P.C.B.
Procedure 1→2→4	1. Remove the 3 screws (❶~❸). 2. Release the tab.

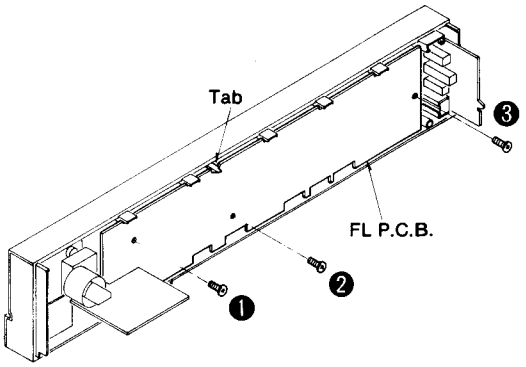

D

Ref. No. 5	How to remove the tuner P.C.B. and main P.C.B.
Procedure 1→2→5	1. Remove the 18 screws (❶~⑱). 2. Remove the tuner P.C.B. and main P.C.B.

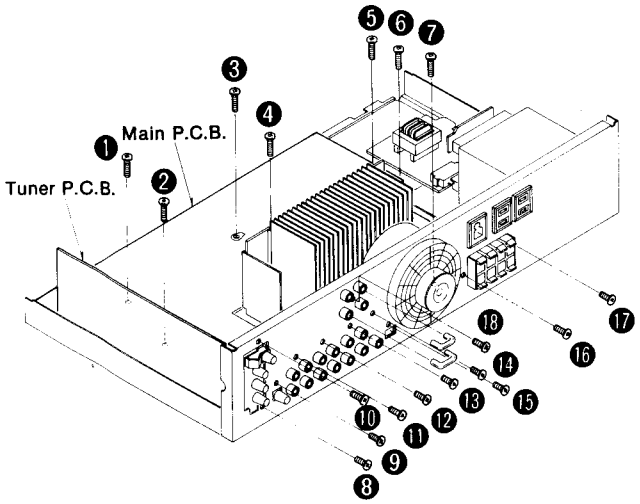

Ref. No. 6	How to remove the power IC
Procedure 1→2→5→6	1. Unsolder the power IC. 2. Remove the 2 screws (❶, ❷).

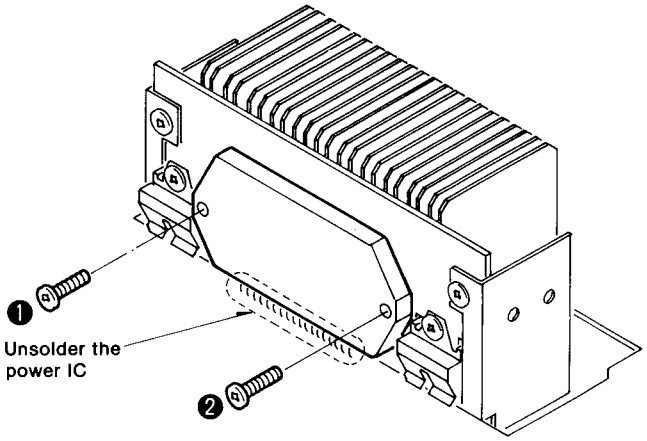

Note: When mounting the power IC, apply silicon terminal compound (SZZ0L15) to the rear of the power IC.

How to check the main P.C.B.

1. Remove the 7 screws (❶~❼) in above figure.
2. Remove the 9 screws (⑯~㉔).
3. Remove the bottom chassis in the direction of the arrow (Ⓐ).

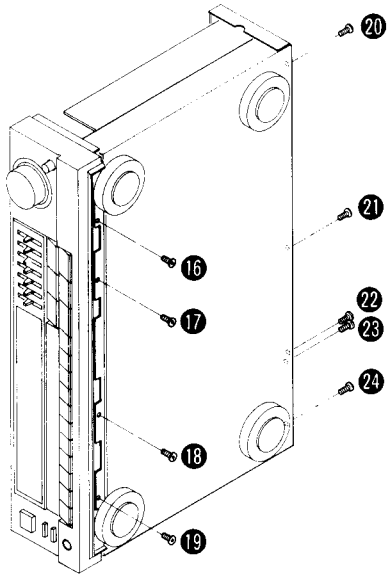

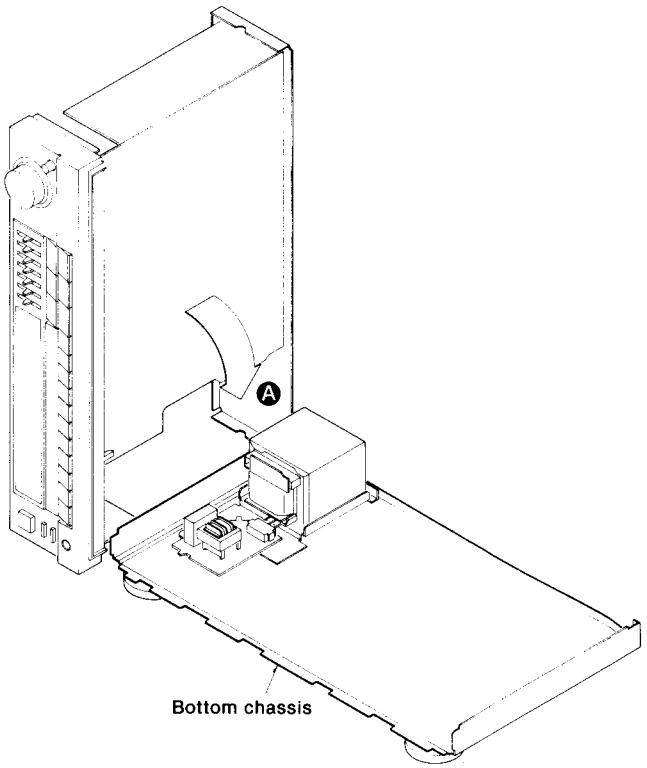

D

Ref. No. 7	How to remove the balance control P.C.B. and volume P.C.B.
Procedure 1→2→4→7	1. Remove the balance control knob. 2. Remove the 2 screws (❶, ❷). 3. Remove the balance control P.C.B. 4. Remove the 3 screws (❸~❺). 5. Remove the volume P.C.B.

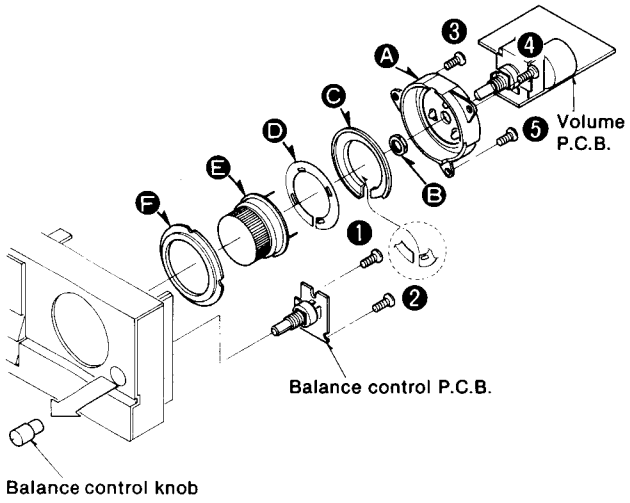

Mounting main volume control

1. Insert the motor volume shaft into volume base (Ⓐ) and secure it with nut (Ⓑ).
2. Insert the shatter plate (Ⓓ) into volume knob (Ⓔ), then mount the volume light guide (Ⓒ), volume knob, and volume ring (Ⓕ) on the volume shaft.

Note: Slip one end of the shatter plate inside the volume light guide.

Ref. No. 8	How to remove the key switch P.C.B.
Procedure 1→2→4→8	1. Remove the 2 screws (❶, ❷), and remove the P.C.B. holder. 2. Remove the 2 screws (❸, ❹). 3. Remove the 2 tabs. 4. Remove the key switch P.C.B.

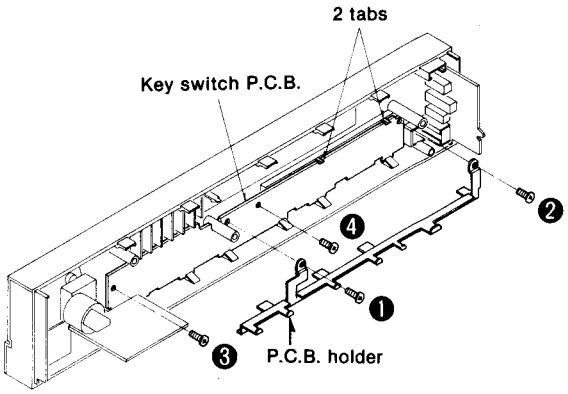

Ref. No. 9	How to disassemble the remote control
Procedure 9	1. Remove the Battery cover lid. 2. Remove screws ❶.

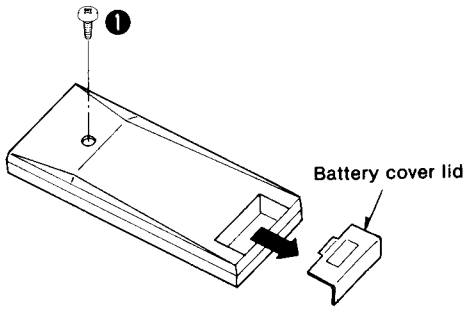

3. Insert a flat blade screwdriver between the upper and lower covers inside the battery compartment and then slowly loosen the bottom cover.

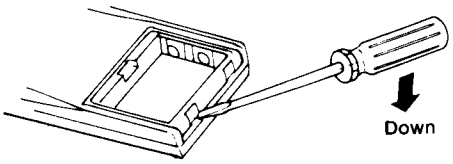

■ MEASUREMENTS AND ADJUSTMENTS

■ FM

Control positions and equipment used

- FM signal generator (AM and FM-SG).
- Stereo modulator
- Distortion analyser
- Oscilloscope
- AC and DC electronic voltmeter (EVM)
- Frequency counter
- Resistor (100kΩ)

Note: For **Z201, Z202, Z321, L321, L322** and **L324**, adjusted parts are supplied. So, do not turn the cores of these parts.

FM MONO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "**FM**" position.
3. Set the radio frequency display and signal generator to **100.10MHz.**
4. Adjust **T201** core so that voltage measured in signal mode is **0mV** (0±20mV) in **300mV** range.
5. Adjust **T202** so that the distortion factor of Lch is minimized.
6. Repeat steps 4 and 5 a few times.
7. Make sure that the distortion factors of Lch and Rch are nearly the same with each other to minimum.

Note:
The adjusting screwdriver used should be made of resin.

FM SIGNAL GENERATOR CONDITION
Modulation.....100%
Modulation frequency.....1kHz (MONO)
Output level.....66dB

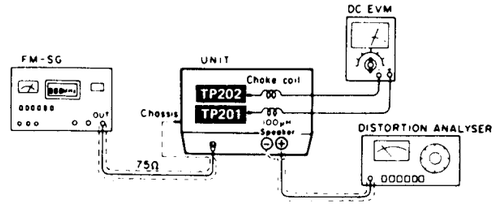

MPX VCO ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "**FM auto**" position.
3. Place the radio frequency display and signal generator to **100.10MHz.**
4. Adjust **VR301** for **19.00±0.03kHz** on frequency counter reading.

FM SIGNAL GENERATOR CONDITION
Modulation.....0% (non-modulation)
Output level.....66dB

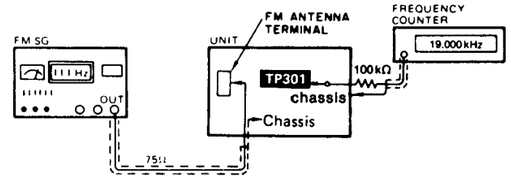

★USING ALTERNATE SYSTEM

1. Apply stereo signal from generator or receive the stereo broadcast.
2. Adjust **VR301** until stereo indicator lights up. Cement arm of **VR301** as shown in figure.

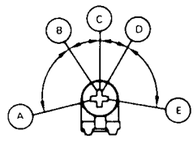

VR301

Ⓐ – Ⓑ Ⓓ – Ⓔ : Stereo OFF position
Ⓑ – Ⓓ : Stereo ON position (indicator lighting)
Ⓒ : Adjust point of Pilot circuit

FM STEREO SEPARATION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "**FM**" mode.
3. Set the radio frequency display and signal generator to **100.10MHz.**
4. Adjust **VR302** so that the R-CH output is minimized when stereo modulator is in "L"(L-CH modulation) mode.

FM SIGNAL GENERATOR CONDITION
Modulation.....Stereo "L" mode or "R" mode 90%, Pilot 10%
Modulation frequency.....1kHz (Pilot 19kHz)
Output level.....66dB

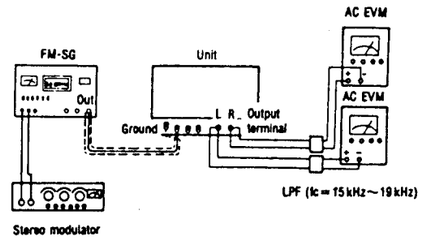

FM STEREO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "**FM**" mode.
3. Set the radio frequency display and signal generator to **100.10MHz.**
4. Adjust **L1** so that the distortion factor of L-CH is minimized.
5. Make sure that the distortion factors of L-CH and R-CH are nearly the same with each other to minimum.

Notes:
1. The adjusting screwdriver used should be made of resin.
2. **L1** should be rotated no more 1/4 turn (90 deg.) on either side.

FM SIGNAL GENERATOR CONDITION
Modulation.....Stereo "L" mode or "R" mode 45%, Pilot 10%
Modulation frequency.....1kHz (Pilot 19kHz)
Output level.....66dB

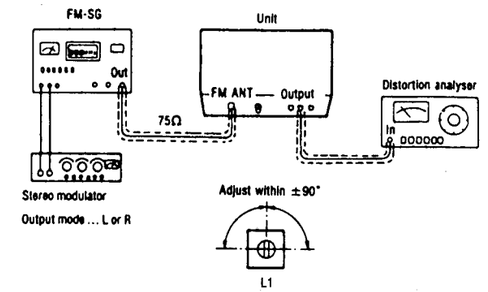

• Adjustment points

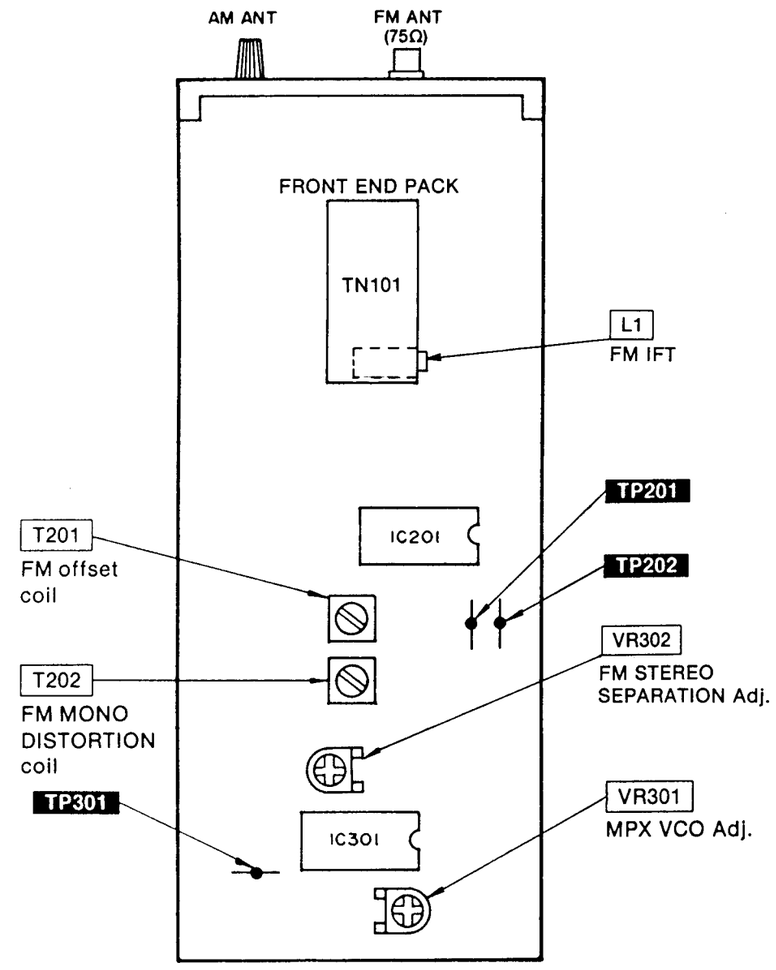

■ FUNCTION OF TERMINAL

• IC901 (LC6554H3682): microcomputer

PIN NO.	MARK	I/O	DESCRIPTION OF TERMINAL
1	PP0 (S13)	O	Segment signal output
2 ∫ 5 • 6 ∫ 8	PA0 ∫ PA3 • PB0 ∫ PB2	I	Key return signal input
9	PB3 (STAND BY)	I	Power supply terminal
10	PC0 (OFF)	I	Power ON/OFF input
11	PC1 (STEREO)	I	Stereo signal input
12	PC2 (SD)	I	SD signal input
13	PC3 (DP)	I/O	Deck control terminal
14	PD0 (RELAY)	O	Relay control output
15	PD1 (DK)	I/O	Deck control terminal
16	NC	———	Not connected
17	NC	———	Not connected
18	PE0 (M0)	O	Auto/mono changeover terminal
19	PE1 (RFM)	O	Muting control output
20	PE2 ($\overline{AT}$)	O	Attenuator control output
21	PE3 (AFM)	O	AF signal muting control output
22	TP	———	Ground terminal
23	V_{SS}	———	Ground terminal
24	OSC1	I	Oscillator terminal
25	OSC2	O	Oscillator terminal
26	$\overline{RES}$	I	Reset signal input
27	PF0/D1	O	Serial data output terminal
28	PF1/CK	O	Clock signal terminal for serial data
29	PF2/CE	O	Chip enable terminal
30	PF3/$\overline{INT}$	I	Remote control input
31	D1	———	Ground terminal

PIN NO.	MARK	I/O	DESCRIPTION OF TERMINAL
32	PG1 (CK)	———	Ground terminal
33	PG2 (ST)	O	Control signal terminal for IC401 (TC9163N)
34 ∫ 37	NC	———	Not connected
38	PI3 (LOUDNESS)	O	Loudness control output
39 • 40	PJ0 (R) • PJ1 (F)	O	Volume motor drive output
41 • 42	NC	———	Not connected
43	V_P	I	Power supply terminal (negative voltage)
44 ∫ 55	S1 ∫ S12	O	Segment signal output
57 ∫ 64	D1 ∫ D8	O	Digit signal output and key scan signal output
56	V_{DD}	I	Power supply terminal (positive voltage)

D

■ RESISTORS & CAPACITORS

Notes : * Important safety notice :
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
Parts without these indications can be used for all areas.

Numbering System For Resistors

Example:

ERD	25	F	J	102
Type	Wattage (1/4W)	Shape	Tolerance	Value (1KΩ)
ERX	2	AN	J	471
Type	Wattage (2W)	Shape	Tolerance	Value (470Ω)

Numbering System For Capacitors

Example:

ECKD	1H	102	Z	F
Type	Voltage (50V)	Value (0.001μF)	Tolerance	Unique
ECEA	50	M	330	
Type	Voltage (50V)	Characteristics	Value (33μF)	

● Capacitance values is in microfarads (μF) unless specified otherwise, P = Pico-farads (pF) F = Farads (F).
● Resistance values is in ohms (Ω), unless specified otherwise, 1K = 1,000Ω, 1M = 1,000kΩ

Resistor Type	Wattage		Tolerance
ERD : Carbon	10 : 1/8W	12 : 1/2W	J : ±5%
ERG : Metal Oxide	14 : 1/4W	25 : 1/4W	F : ±1%
ERQ : Fuse Type Metal	1A : 1W	18 : 1/8W	G : ±2%
ERX : Metal Film	S2 : 1/4W	S1 : 1/2W	J : ±5%
ERD L : Carbon (chip)	2F : 1/4W	50 : 1/2W	K : ±10%
ERO K : Metal Film (chip)	2A : 2W	3A : 3W	M : ±20%
ERC : Solid	6G : 1/10W	8G : 1/8W	
ERF : Incombustible Box-Shaped			
ERM : Wire-Wound			
RRJ : Chip Resistor			
ERJ : Chip Resistor			

Capacitor Type	Voltage		Tolerance
ECE : Electrolytic	0J : 6.3V	1A : 10V	K : ±10%
ECCD : Ceramic	1C : 16V	1E : 25V	M : ±20%
ECKD : Ceramic Capacitor	1H : 50V	1V : 35V	Z : +80 % −20
ECQM : Polyester	50 : 50V	05 : 50V	J : ±5%
ECQP : Polypropylene	2H : 500V	2A : 100V	G : ±2%
ECG : Ceramic	1 : 100V	1J : 63V	F : ±1%
ECEA N : Non Polar Electrolytic	KC : 400V AC		C : ±0.25pF
QCU : Ceramic (Chip Type)	KC : 125V AC (UL)		D : ±0.5pF
ECUX : Ceramic (Chip Type)			
ECF : Semiconductor			
EECW : Liquid electrolyte double layer capacitor			

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
RESISTORS(VALUE,WATTAGE)			R240	ERDS2TJ152	1.5K 1/4	R423	ERDS2TJ823	82K 1/4
R101	ERDS2TJ103	10K 1/4	R247	ERDS2TJ103	10K 1/4	R424	ERDS2TJ823	82K 1/4
R102	ERDS2TJ103	10K 1/4	R301	ERDS2TJ393	39K 1/4	R451	ERDS2TJ391	390 1/4
R104	ERDS2TJ102	1K 1/4	R302	ERDS2TJ151	150 1/4	R452	ERDS2TJ391	390 1/4
R105	ERDS2TJ561	560 1/4	R303	ERDS2TJ223	22K 1/4	R453	ERDS2TJ224	220K 1/4
R106	ERDS2TJ562	5.6K 1/4	R304	ERDS2TJ223	22K 1/4	R454	ERDS2TJ224	220K 1/4
R107	ERDS2TJ103	10K 1/4	R305	ERDS2TJ272	2.7K 1/4	R455	ERDS2TJ563	56K 1/4
R108	ERDS2TJ151	150 1/4	R306	ERDS2TJ272	2.7K 1/4	R456	ERDS2TJ563	56K 1/4
R201	ERDS2TJ332	3.3K 1/4	R307	ERDS2TJ562	5.6K 1/4	R457	ERDS2TJ271	270 1/4
R202	ERDS2TJ474	470K 1/4	R308	ERDS2TJ562	5.6K 1/4	R458	ERDS2TJ271	270 1/4
R203	ERDS2TJ122	1.2K 1/4	R309	ERDS2TJ224	220K 1/4	R459	ERDS2TJ680	68 1/4
R204	ERDS2TJ824	820K 1/4	R311	ERDS2TJ102	1K 1/4	R460	ERDS2TJ680	68 1/4
R205	ERDS2TJ391	390 1/4	R312	ERDS2TJ153	15K 1/4	R461	ERDS2TJ184	180K 1/4
R206	ERDS2TJ221	220 1/4	R313	ERDS2TJ473	47K 1/4	R462	ERDS2TJ184	180K 1/4
R207	ERDS2TJ822	8.2K 1/4	R314	ERDS2TJ473	47K 1/4	R463	ERDS2TJ123	12K 1/4
R208	ERDS2TJ102	1K 1/4	R315	ERDS2TJ103	10K 1/4	R464	ERDS2TJ123	12K 1/4
R209	ERDS2TJ471	470 1/4	R316	ERDS2TJ103	10K 1/4	R465	ERDS2TJ563	56K 1/4
R210	ERDS2TJ332	3.3K 1/4	R317	ERDS2TJ473	47K 1/4	R466	ERDS2TJ563	56K 1/4
R211	ERDS2TJ222	2.2K 1/4	R321	ERDS2TJ223	22K 1/4	R467	ERDS2TJ102	1K 1/4
R212	ERDS2TJ153	15K 1/4	R322	ERDS2TJ223	22K 1/4	R468	ERDS2TJ102	1K 1/4
R213	ERDS2TJ104	100K 1/4	R325	ERDS2TJ102	1K 1/4	R501	ERDS2TJ222	2.2K 1/4
R214	ERDS2TJ824	820K 1/4	R326	ERDS2TJ102	1K 1/4	R502	ERDS2TJ222	2.2K 1/4
R215	ERDS2TJ822	8.2K 1/4	R327	ERDS2TJ183	18K 1/4	R503	ERDS2TJ103	10K 1/4
R216	ERDS2TJ563	56K 1/4	R401	ERDS2TJ332	3.3K 1/4	R504	ERDS2TJ103	10K 1/4
R217	ERDS2TJ223	22K 1/4	R402	ERDS2TJ332	3.3K 1/4	R505	ERDS2TJ104	100K 1/4
R218	ERDS2TJ123	12K 1/4	R403	ERDS2TJ822	8.2K 1/4	R506	ERDS2TJ104	100K 1/4
R219	ERDS2TJ562	5.6K 1/4	R404	ERDS2TJ822	8.2K 1/4	R507	ERDS2TJ472	4.7K 1/4
R220	ERDS2TJ103	10K 1/4	R405	ERDS2TJ470	47 1/4	R508	ERDS2TJ472	4.7K 1/4
R221	ERDS2TJ104	100K 1/4	R406	ERDS2TJ470	47 1/4	R509	ERDS2TJ563	56K 1/4
R222	ERDS2TJ473	47K 1/4	R407	ERDS2TJ104	100K 1/4	R510	ERDS2TJ563	56K 1/4
R223	ERDS2TJ154	150K 1/4	R408	ERDS2TJ104	100K 1/4	R513	ERDS2TJ104	100K 1/4
R224	ERDS2TJ393	39K 1/4	R409	ERDS2TJ103	10K 1/4	R514	ERDS2TJ104	100K 1/4
R227	ERDS2TJ104	100K 1/4	R410	ERDS2TJ103	10K 1/4	R515	ERDS2TJ182	1.8K 1/4
R228	ERDS2TJ123	12K 1/4	R411	ERDS2TJ104	100K 1/4	R516	ERDS2TJ182	1.8K 1/4
R229	ERDS2TJ102	1K 1/4	R412	ERDS2TJ104	100K 1/4	R517	ERDS2TJ563	56K 1/4
R230	ERDS2TJ104	100K 1/4	R413	ERDS2TJ102	1K 1/4	R518	ERDS2TJ563	56K 1/4
R231	ERDS2TJ391	390 1/4	R414	ERDS2TJ102	1K 1/4	R519	ERDS2TJ563	56K 1/4
R232	ERDS2TJ122	1.2K 1/4	R415	ERDS2TJ104	100K 1/4	R522	ERDS2TJ223	22K 1/4
R233	ERDS2TJ684	680K 1/4	R416	ERDS2TJ104	100K 1/4	R523	ERDS2TJ223	22K 1/4
R234	ERDS2TJ103	10K 1/4	R417	ERDS2TJ104	100K 1/4	R524	ERDS2TJ223	22K 1/4
R235	ERDS2TJ471	470 1/4	R418	ERDS2TJ104	100K 1/4	R525	ERDS2TJ332	3.3K 1/4
			R421	ERDS2TJ332	3.3K 1/4	R526	ERDS2TJ332	3.3K 1/4

Ref. No.	Part No.	Value.
R527	ERDS2TJ333	33K 1/4
R528	ERDS2TJ563	56K 1/4
R530	ERDS2TJ333	33K 1/4
R531	ERDS2TJ153	15K 1/4
R532	ERDS2TJ153	15K 1/4
R541	ERDS2TJ331	330 1/4
R542	ERDS2TJ331	330 1/4
R551	ERDS2TJ103	10K 1/4
R552	ERDS2TJ103	10K 1/4
R553	ERDS2TJ472	4.7K 1/4
R554	ERDS2TJ472	4.7K 1/4
R555	ERDS2TJ683	68K 1/4
R556	ERDS2TJ683	68K 1/4
R557	ERDS2TJ562	5.6K 1/4
R558	ERDS2TJ562	5.6K 1/4
R559	ERDS2TJ122	1.2K 1/4
R560	ERDS2TJ122	1.2K 1/4
R561	ERDS2TJ683	68K 1/4
R562	ERDS2TJ683	68K 1/4
R563	ERDS2TJ562	5.6K 1/4
R564	ERDS2TJ562	5.6K 1/4
R565	ERDS2TJ122	1.2K 1/4
R566	ERDS2TJ122	1.2K 1/4
R567	ERDS2TJ470	47 1/4
R601	ERDS2TJ392	3.9K 1/4
R602	ERDS2TJ392	3.9K 1/4
R603	ERDS2TJ563	56K 1/4
R604	ERDS2TJ563	56K 1/4
R605	ERDS2TJ182	1.8K 1/4
R606	ERDS2TJ182	1.8K 1/4
R607	ERDS2TJ563	56K 1/4
R608	ERDS2TJ563	56K 1/4
R609	ERDS2TJ470	47 1/4
R610	ERDS2TJ470	47 1/4
R611 ⚠	ERD25FJ100	10 1/4
R612 ⚠	ERD25FJ100	10 1/4
R613	ERDS2TJ223	22K 1/4
R614 ⚠	ERD25FJ470	47 1/4
R615	ERDS2TJ473	47K 1/4
R616 ⚠	ERDS1FJ181	180 1/2
R617 ⚠	ERDS1FJ181	180 1/2
R618 ⚠	ERDS1FJ181	180 1/2
R619 ⚠	ERG2ANJP331S	330 2
R620 ⚠	ERG2ANJP331S	330 2
R621	ERDS2TJ222	2.2K 1/4
R622	ERDS2TJ222	2.2K 1/4
R623	ERDS2TJ684	680K 1/4
R624	ERDS2TJ104	100K 1/4
R627	ERDS2TJ154	150K 1/4
R628	ERDS2TJ684	680K 1/4
R630 ⚠	ERDS1FJ181	180 1/2
R631	ERDS2TJ101	100 1/4
R651	ERDS2TJ223	22K 1/4
R652	ERDS2TJ223	22K 1/4
R653	ERDS2TJ223	22K 1/4
R654	ERDS2TJ223	22K 1/4
R655	ERDS2TJ392	3.9K 1/4
R656	ERDS2TJ103	10K 1/4
R657	ERDS2TJ103	10K 1/4
R658	ERDS2TJ223	22K 1/4
R659 ⚠	ERDS1FJ820	82 1/2
R660 ⚠	ERDS1FJ820	82 1/2
R661	ERDS2TJ153	15K 1/4
R671	ERDS2TJ471	470 1/4
R672	ERDS2TJ471	470 1/4
R673	ERDS2TJ102	1K 1/4
R674	ERDS2TJ102	1K 1/4
R675	ERDS2TJ102	1K 1/4
R676	ERDS2TJ102	1K 1/4
R679	ERDS2TJ102	1K 1/4
R680	ERDS2TJ102	1K 1/4
R681	ERDS2TJ222	2.2K 1/4
R682	ERDS2TJ222	2.2K 1/4
R683	ERDS2TJ102	1K 1/4
R684	ERDS2TJ102	1K 1/4
R685	ERDS2TJ102	1K 1/4
R686	ERDS2TJ102	1K 1/4

Ref. No.	Part No.	Value.
R687	ERDS2TJ221	220 1/4
R688	ERDS2TJ221	220 1/4
R701 ⚠	ERDS1FJ332	3.3K 1/2
R702	ERDS2TJ122	1.2K 1/4
R703	ERDS2TJ272	2.7K 1/4
R704	ERDS2TJ222	2.2K 1/4
R705	ERDS2TJ272	2.7K 1/4
R706	ERDS2TJ1R2	1.2 1/4
R707	ERDS2TJ1R2	1.2 1/4
R708 ⚠	ERDS1FJ270	27 1/2
R709 ⚠	ERDS1FJ270	27 1/2
R710	ERDS2TJ272	2.7K 1/4
R713	ERDS2TJ183	18K 1/4
R715	ERDS2TJ101	100 1/4
R716	ERDS2TJ222	2.2K 1/4
R717 ⚠	ERD25FJ150	15 1/4
R719	ERDS2TJ4R7	4.7 1/4
R720	ERDS2TJ222	2.2K 1/4
R721	ERDS2TJ472	4.7K 1/4
R722	ERDS2TJ333	33K 1/4
R723	ERDS2TJ223	22K 1/4
R724	ERDS2TJ103	10K 1/4
R725	ERDS2TJ823	82K 1/4
R751	ERDS2TJ272	2.7K 1/4
R752	ERDS2TJ562	5.6K 1/4
R753	ERDS2TJ472	4.7K 1/4
R754	ERDS2TJ472	4.7K 1/4
R755	ERDS2TJ102	1K 1/4
R771 ⚠	ERDS1FJ2R2	2.2 1/2
R772 ⚠	ERDS1FJ2R2	2.2 1/2
R773 ⚠	ERD25FJ4R7	4.7 1/4
R774 ⚠	ERD25FJ4R7	4.7 1/4
R775 ⚠	ERD25FJ4R7	4.7 1/4
R776 ⚠	ERD25FJ4R7	4.7 1/4
R777 ⚠	ERD25FJ4R7	4.7 1/4
R778 ⚠	ERD25FJ4R7	4.7 1/4
R779 ⚠	ERDS1FJ121	120 1/2
R780 ⚠	ERDS1FJ121	120 1/2
R781 ⚠	ERDS1FJ121	120 1/2
R782 ⚠	ERDS1FJ121	120 1/2
R785 ⚠	ERDS1FJ2R2	2.2 1/2
R814	ERDS2TJ473	47K 1/4
R815	ERDS2TJ473	47K 1/4
R816	ERDS2TJ473	47K 1/4
R817	ERDS2TJ473	47K 1/4
R818	ERDS2TJ473	47K 1/4
R819	ERDS2TJ473	47K 1/4
R820	ERDS2TJ473	47K 1/4
R821	ERDS2TJ124	120K 1/4
R822	ERDS2TJ392	3.9K 1/4
R823	ERDS2TJ124	120K 1/4
R824	ERDS2TJ392	3.9K 1/4
R825	ERDS2TJ124	120K 1/4
R826	ERDS2TJ392	3.9K 1/4
R827	ERDS2TJ124	120K 1/4
R828	ERDS2TJ392	3.9K 1/4
R829	ERDS2TJ124	120K 1/4
R830	ERDS2TJ392	3.9K 1/4
R831	ERDS2TJ124	120K 1/4
R832	ERDS2TJ392	3.9K 1/4
R833	ERDS2TJ124	120K 1/4
R834	ERDS2TJ392	3.9K 1/4
R835	ERDS2TJ273	27K 1/4
R836	ERDS2TJ101	100 1/4
R851 ⚠	ERDS1FJ2R2	2.2 1/2
R891	ERDS2TJ182	1.8K 1/4
R901	ERDS2TJ222	2.2K 1/4
R902	ERDS2TJ105	1M 1/4
R903	ERDS2TJ563	56K 1/4
R904	ERDS2TJ123	12K 1/4
R905	ERDS2TJ103	10K 1/4
R906	ERDS2TJ334	330K 1/4
R907	ERDS2TJ681	680 1/4
R910	ERDS2TJ122	1.2K 1/4
R911	ERDS2TJ103	10K 1/4
R913	ERDS2TJ101	100 1/4
R914	ERDS2TJ101	100 1/4

Ref. No.	Part No.	Value.
R915	ERDS2TJ181	180 1/4
R916	ERDS2TJ104	100K 1/4
R919	ERDS2TJ122	1.2K 1/4
R920	ERDS2TJ122	1.2K 1/4
R922	ERDS2TJ224	220K 1/4
R923	ERDS2TJ331	330 1/4
R924	ERDS2TJ331	330 1/4
R925	ERDS2TJ331	330 1/4
R951	ERDS2TJ472	4.7K 1/4
R952	ERDS2TJ472	4.7K 1/4
R953	ERDS2TJ103	10K 1/4
R954	ERDS2TJ331	330 1/4
R955	ERDS2TJ222	2.2K 1/4

CAPACITORS(VALUE,VOLTAGE)

C101	RCBS1H150JCY	15P 50
C102	RCBS1H150JCY	15P 50
C103	ECBT1H102KB5	0.001 50
C104	RCBS1H181KBY	180P 50
C105	ECEA0JS221	220 6.3
C106	ECKD1H103PF	0.01 50
C107	ECKD1H223PF	0.022 50
C108	ECEA25M4R7R	4.7 25
C109	ECEA1CU330	33 16
C110	ECBT1H102KB5	0.001 50
C201	ECKD1H103PF	0.01 50
C202	ECKD1H103PF	0.01 50
C204	RCBC1H470JLY	47P 50
C205	ECKD1H223PF	0.022 50
C206	RCBS1H150JCY	15P 50
C208	ECEA0JU101	100 6.3
C209	ECEA1CKS100	10 16
C210	ECKD1H223PF	0.022 50
C211	ECKD1H223PF	0.022 50
C212	ECKD1H223PF	0.022 50
C213	RCBC1H101KBY	100P 50
C214	ECEA1CKS100	10 16
C215	ECKD1H103PF	0.01 50
C216	ECEA1CKS100	10 16
C217	ECEA1HK010	1 50
C220	ECEA1CKS100	10 16
C221	ECFTD183KXL	0.018 25
C222	ECQM1H473JZ	0.047 50
C225	RCBS1H180JCY	18P 50
C226	ECKD1H103PF	0.01 50
C227	ECEA1CKS100	10 16
C230	RCBC1H471KBY	470P 50
C301	ECEA1CU101	100 16
C302	ECEA1HKR47	0.47 50
C303	ECEA1HK010	1 50
C304	ECEA1HK3R3	3.3 50
C305	ECEA1HK3R3	3.3 50
C306	ECEA1HK3R3	3.3 50
C307	ECFTD392KXL	0.0039 25
C308	ECFTD392KXL	0.0039 25
C309	ECKD1H102PF	0.001 50
C310	ECFTD473KXL	0.047 25
C311	ECQP1471JZ	470P 125
C312	ECEA1VK4R7	4.7 35
C313	ECBT1H102KB5	0.001 50
C314	ECBT1H102KB5	0.001 50
C321	ECEA1CKS100	10 16
C323	ECFTD332KXL	0.0033 25
C324	ECFTD332KXL	0.0033 25
C325	RCBS1H330JLY	33P 50
C327	ECBT1H102KB5	0.001 50
C401	ECKD1H103PF	0.01 50
C402	ECKD1H103PF	0.01 50
C405	ECEA1EK3R3	3.3 25
C406	ECEA1EK3R3	3.3 25
C407	ECCD1H101K	100P 50
C408	ECCD1H101K	100P 50
C409	ECKD1H103PF	0.01 50
C410	ECKD1H103PF	0.01 50
C411	ECEA1EK3R3	3.3 25
C412	ECEA1EK3R3	3.3 25
C415	ECKD1H103PF	0.01 50

D

Ref. No.	Part No.	Value.
C416	ECKD1H103PF	0.01 50
C417	ECKD1H103PF	0.01 50
C418	ECEA1HKR47	0.47 50
C419	ECEA0JU101	100 6.3
C421	ECEA1CK220	22 16
C422	ECEA1CK220	22 16
C425	ECCD1H101K	100P 50
C426	ECCC1H221K	220P 50
C451	ECEA1EK3R3	3.3 25
C452	ECEA1EK3R3	3.3 25
C453	ECCD1H101K	100P 50
C454	ECCD1H101K	100P 50
C455	ECBT1H102KB	0.001 50
C456	ECBT1H102KB	0.001 50
C457	ECFTD223KXL	0.022 25
C458	ECFTD223KXL	0.022 25
C459	ECFTD682KXL	0.0068 25
C460	ECFTD682KXL	0.0068 25
C461	ECEA1EK3R3	3.3 25
C462	ECEA1EK3R3	3.3 25
C463	ECEA0JK330	33 6.3
C464	ECEA0JK330	33 6.3
C501	ECKD1H331KB	330P 50
C502	ECKD1H331KB	330P 50
C503	ECFTD333KXL	0.033 25
C504	ECFTD333KXL	0.033 25
C505	ECEA1EK3R3	3.3 25
C506	ECEA1EK3R3	3.3 25
C509	ECEA1CKS100	10 16
C510	ECEA1CKS100	10 16
C511	ECCD1H120KC	12P 50
C512	ECCD1H120KC	12P 50
C513	ECEA1EK3R3	3.3 25
C514	ECEA1EK3R3	3.3 25
C515	ECBT1E103ZF	0.01 25
C516	ECEA1EK3R3	3.3 25
C517	ECKD1H103PF	0.01 50
C518	ECKD1H103PF	0.01 50
C520	ECEA1EK3R3	3.3 25
C541	ECCD1H330K	33P 50
C542	ECCD1H330K	33P 50
C543	ECCD1H101K	100P 50
C551	ECFTD273KXL	0.027 25
C552	ECFTD273KXL	0.027 25
C553	ECEA1HKR47	0.47 50
C554	ECEA1HKR47	0.47 50
C555	ECFTD822KXL	0.0082 25
C556	ECFTD822KXL	0.0082 25
C557	ECEA1HKR22	0.22 50
C558	ECEA1HKR22	0.22 50
C559	ECFTD472KXL	0.0047 25
C560	ECFTD472KXL	0.0047 25
C561	ECFTD683KXL	0.068 25
C562	ECFTD683KXL	0.068 25
C563	ECFTD152KXL	0.0015 25
C564	ECFTD152KXL	0.0015 25
C565	ECFTD333KXL	0.033 25
C566	ECFTD333KXL	0.033 25
C567	ECFTD102KXL	0.001 25
C568	ECFTD102KXL	0.001 25
C569	ECFTD822KXL	0.0082 25
C570	ECFTD822KXL	0.0082 25
C571	ECCD1H820K	82P 50
C572	ECCD1H820K	82P 50
C573	ECKD1H471KB	470P 50
C574	ECKD1H471KB	470P 50
C575	ECEA1EK3R3	3.3 25
C576	ECEA1EK3R3	3.3 25
C577	ECEA1CKS100	10 16
C578	ECEA1CKS100	10 16
C579	ECEA1CKS100	10 16
C580	ECEA1CKS100	10 16
C581	ECFTD683KXL	0.068 25
C582	ECFTD683KXL	0.068 25
C583	ECEA1HK2R2B	2.2 50
C584	ECEA1HK2R2B	2.2 50
C585	ECKD1H561KB	560P 50
C586	ECKD1H561KB	560P 50
C587	ECFTD392KXL	0.0039 25
C588	ECFTD392KXL	0.0039 25
C589	ECEA1EK3R3	3.3 25
C590	ECEA1EK3R3	3.3 25
C601	ECEA1EK3R3	3.3 25
C602	ECEA1EK3R3	3.3 25
C603	ECQP1271JZ	270P 100
C604	ECQP1271JZ	270P 100
C605	ECEA1CK220	22 16
C606	ECEA1CK220	22 16
C607	ECCD1H100KC	10P 50
C608	ECCD1H100KC	10P 50
C609	ECCD1H151K	150P 50
C610	ECCD1H151K	150P 50
C611	ECKD1H223PF	0.022 50
C612	ECKD1H223PF	0.022 50
C613	ECEA1CU101	100 16
C614	ECEA1HS330	33 50
C615	ECEA2AU100	10 100
C616	ECEA2AN2R2S	2.2 100
C617	ECQM1H681KF	680P 50
C618	ECQM1H681KF	680P 50
C651	ECEA1CKS100	10 16
C671	ECCD1H180KC	18P 50
C672	ECCD1H180KC	18P 50
C673	ECCC1H221K	220P 50
C674	ECCC1H221K	220P 50
C675	ECCD1H101K	100P 50
C676	ECCD1H101K	100P 50
C677	ECCD1H101K	100P 50
C678	ECCD1H101K	100P 50
C679	ECCD1H101K	100P 50
C680	ECCD1H101K	100P 50
C683	ECCD1H101K	100P 50
C684	ECCD1H101K	100P 50
C685	ECKD1H103PF	0.01 50
C686	ECKD1H103PF	0.01 50
C687	ECKD1H103PF	0.01 50
C688	ECKD1H103PF	0.01 50
C689	ECCD1H101K	100P 50
C690	ECCD1H101K	100P 50
C693	ECCD1H820K	82P 50
C694	ECCD1H820K	82P 50
C695	ECCD1H331K	330P 50
C696	ECCD1H331K	330P 50
C697	ECCD1H101K	100P 50
C698	ECCD1H101K	100P 50
C701	ECES1JU822U	8200 63
C702	ECES1JU822U	8200 63
C703	ECKD1H103PF	0.01 50
C704	ECEA2AU100	10 100
C705	ECEA1CU101	100 16
C706	ECKD1H103PF	0.01 50
C708	ECEA1CU101	100 16
C709	ECKD1H103PF	0.01 50
C710	ECKD1H103PF	0.01 50
C711	ECEA1CU101	100 16
C712	ECEA1VU470	47 35
C713	ECEA0JU101	100 6.3
C714	ECEA0JU101	100 6.3
C715	ECEA1EK3R3	3.3 25
C751	ECEA16V1000	1000 16
C752	ECEA1CU470	47 16
C753	ECKD1H103PF	0.01 50
C754	ECKD1H103PF	0.01 50
C755	ECEA1CU330	33 16
C771 ⚠	ECQE1104KN	0.1 100
C781	ECEA1JU471	470 63
C791 ⚠	ECKWNS103ZV	0.01 125
C811	ECEA1CKS100	10 16
C812	ECEA1CKS100	10 16
C813	ECEA1CKS100	10 16
C814	ECEA1CKS100	10 16
C815	ECEA1CKS100	10 16
C816	ECEA1CKS100	10 16
C817	ECEA1CKS100	10 16
C818	ECEA1HK0R1	0.0039 50
C819	ECEA1HK0R1	0.0039 50
C820	ECFTD473KXL	0.047 25
C821	ECFTD473KXL	0.047 25
C822	ECFTD183KXL	0.018 25
C823	ECFTD183KXL	0.018 25
C824	ECFTD682KXL	0.0068 25
C825	ECFTD682KXL	0.0068 25
C826	ECFTD272KXL	0.0027 25
C827	ECFTD272KXL	0.0027 25
C828	ECFTD122KXL	0.0012 25
C829	ECFTD122KXL	0.0012 25
C830	ECKD1H561KB	560P 50
C831	ECKD1H561KB	560P 50
C832	ECEA1EK3R3	3.3 25
C851	ECFTD104KXL	0.1 25
C852	ECEA0JU101	100 6.3
C853	ECFTD104KXL	0.1 25
C854	ECFTD104KXL	0.1 25
C891	ECKD1H392KB	3900P 50
C901	ECEA0JS102	1000 6.3
C902	ECEA0JS102	1000 6.3
C903	ECEA1HK010	1 50
C905	ECKD1H331KB	330P 50
C910	ECKD1H103PF	0.01 50
C911	ECEA1HU3R3	3.3 50
C912	ECEA1HK3R3	3.3 50
C913	ECEA1HK3R3	3.3 50
C914	ECEA1VK100	10 35
C915	ECEA1HU101	100 50
C916	ECEA0JS102	1000 6.3
C917	ECKD1H102PF	0.001 50
C918	RCBS1H150JCY	15P 50
C919	ECEA1EK3R3	3.3 25
C922	ECKD1H331KB	330P 50
C951	ECEA0JU101	100 6.3

D

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice :
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
Parts without these indications can be used for all areas.

Ref. No.	Part No.	Description
INTEGRATED CIRCUITS		
IC101	LM7001	I.C. PLL SYNTHE SIZER
IC201	AN7273B	I.C. FM/AM IF AMP
IC301	SVIUPC1161C3	I.C. FM MOLTIPLEX
IC401	TC9163N	I.C. INPUT SELECTOR
IC402	AN6552F	I.C. BUFFER AMP
IC451	AN6558F	I.C. PHONO EQ AMP
IC501	AN6558F	I.C. BUFFER AMP
IC502	LC4966	I.C. GRAPIC EQ CONTROL
IC551	M5226P	I.C. GRAPHIC EQ AMP
IC552	M5226P	I.C. GRAPHIC EQ AMP
IC601	SVI3205	I.C. POWER AMP
IC803	AN6554F	I.C. BAND PASS FILTER
IC804	AN6554F	I.C. BAND PASS FILTER
IC851	BA6218	I.C. MOTOR DRIVE
IC901	LC6554H3682	I.C. MICROCOMPUTOR
IC902	AN80B70	I.C. DATA COAD DET
IC951	BA6148	I.C. FL DRIVE
TRANSISTORS		
Q101	2SC2785FE	TRANSISTOR
Q102	2SC2785FE	TRANSISTOR
Q201	2SC2787L	TRANSISTOR
Q202	2SC2787L	TRANSISTOR
Q204	2SC1740SQ	TRANSISTOR
Q205	2SC1740SQ	TRANSISTOR
Q206	2SA933SQR	TRANSISTOR
Q207	2SC1740SQ	TRANSISTOR
Q208	2SA933SQR	TRANSISTOR
Q209	2SA933SQR	TRANSISTOR
Q210	2SC1740SQ	TRANSISTOR
Q301	2SD1450RS	TRANSISTOR
Q302	2SD1450RS	TRANSISTOR
Q303	2SA933SQR	TRANSISTOR
Q501	2SJ40CD	TRANSISTOR
Q502	2SJ40CD	TRANSISTOR
Q503	2SK117-GR	TRANSISTOR
Q504	2SK117-GR	TRANSISTOR
Q505	UN4111	TRANSISTOR
Q506	UN4211	TRANSISTOR
Q507	UN4211	TRANSISTOR
Q508	UN4111	TRANSISTOR
Q509	UN4211	TRANSISTOR
Q510	2SJ40CD	TRANSISTOR
Q513	UN4211	TRANSISTOR
Q514	UN4211	TRANSISTOR
Q551	2SC2603EFG	TRANSISTOR
Q552	2SC2603EFG	TRANSISTOR
Q553	2SC2603EFG	TRANSISTOR
Q554	2SC2603EFG	TRANSISTOR
Q601	2SA684-RNC	TRANSISTOR
Q651	2SC3311A-Q	TRANSISTOR
Q652	2SA1309AQS	TRANSISTOR
Q701	2SD1761DEF	TRANSISTOR
Q702	2SD1761DEF	TRANSISTOR
Q703	2SC2631QRS	TRANSISTOR
Q704	2SC2631QRS	TRANSISTOR
Q705	2SC1384A-R	TRANSISTOR
Q708	2SB1187DEF	TRANSISTOR
Q709	2SC2631QRS	TRANSISTOR
Q710	2SB1185DEF	TRANSISTOR
Q711	UN4211	TRANSISTOR
Q712	2SA1309AQS	TRANSISTOR
Q713	UN4215	TRANSISTOR
Q751	2SC3311A-Q	TRANSISTOR
Q752	2SC1384A-R	TRANSISTOR
Q891	UN4113	TRANSISTOR
Q892	UN4215	TRANSISTOR
Q893	UN4215	TRANSISTOR
Q894	UN4215	TRANSISTOR
Q901	2SC1740SQ	TRANSISTOR
Q902	UN4215	TRANSISTOR
Q951	UN4115	TRANSISTOR
Q952	UN4115	TRANSISTOR
Q953	UN4115	TRANSISTOR
Q954	UN4115	TRANSISTOR
Q955	UN4115	TRANSISTOR
Q956	UN4115	TRANSISTOR
Q957	UN4115	TRANSISTOR
Q958	UN4213	TRANSISTOR
Q959	UN4213	TRANSISTOR
Q960	UN4213	TRANSISTOR
Q961	UN4213	TRANSISTOR
Q962	UN4213	TRANSISTOR
Q963	UN4213	TRANSISTOR
Q964	UN4213	TRANSISTOR
Q965	UN4115	TRANSISTOR
Q966	UN4115	TRANSISTOR
Q967	UN4115	TRANSISTOR
Q968	UN4115	TRANSISTOR
Q969	UN4115	TRANSISTOR
Q970	UN4115	TRANSISTOR
Q971	UN4115	TRANSISTOR
Q972	UN4115	TRANSISTOR
Q973	UN4115	TRANSISTOR
DIODES		
D101	MA165	DIODE
D202	MA4110M	DIODE
D204	MA165	DIODE
D206	MA165	DIODE
D301	MA165	DIODE
D551	MA4030M	DIODE
D552	MA4030M	DIODE
D601	MA4120	DIODE
D602	MA4120	DIODE
D651	MA165	DIODE
D652	MA4051-M	DIODE
D653	MA165	DIODE
D701 ⚠	SVDS3V40	DIODE
D702 ⚠	SVDS3V40	DIODE
D703 ⚠	SVDS3V40	DIODE
D704 ⚠	SVDS3V40	DIODE
D705	MA4062-M	DIODE
D706	MA4062-M	DIODE
D709	MA4300M	DIODE
D710	MA29WA	DIODE
D711	MA4150M	DIODE
D712	MA165	DIODE
D713	MA165	DIODE
D751 ⚠	SVD1SR35200A	DIODE
D752 ⚠	SVD1SR35200A	DIODE
D753 ⚠	SVD1SR35200A	DIODE
D754 ⚠	SVD1SR35200A	DIODE
D755	MA165	DIODE
D756	MA165	DIODE
D757	MA4068M	DIODE
D781 ⚠	SVD1SR35200A	DIODE
D818	MA165	DIODE
D819	MA165	DIODE
D820	MA165	DIODE
D821	MA165	DIODE
D822	MA165	DIODE
D823	MA165	DIODE
D824	MA165	DIODE
D891	MA165	DIODE
D892	LN846RP	L.E.D
D901	MA165	DIODE
D902	MA165	DIODE
D903	MA165	DIODE
D904	MA165	DIODE
D905	MA165	DIODE
D906	MA165	DIODE
D907	MA165	DIODE

Ref. No.	Part No.	Description
D908	MA165	DIODE
D909	MA165	DIODE
D910	MA165	DIODE
D911	MA165	DIODE
D912	MA4068M	DIODE
D914	MA165	DIODE
D915	MA165	DIODE
D919	MA165	DIODE
D921	MA165	DIODE
D922	MA165	DIODE
D951	MA165	DIODE
D952	MA165	DIODE
D953	MA165	DIODE
D954	MA165	DIODE
D955	MA165	DIODE
D956	MA165	DIODE
D957	MA165	DIODE
D958	MA4075M	DIODE
D959	MA4075M	DIODE
D960	MA165	DIODE
VARIABLE RESISTORS		
VR301	EVND4AA00B53	V.R, MPX VCO
VR302	EVND4AA00B53	V.R, SEPARATION
VR501	EUWMV7F20B15	V.R, BALANCE
VR502	EWHFDAF20G15	V.R, MAIN
VR551	EVBJJAJ15G15	V.R, EQ
VR552	EVBJJAJ15G15	V.R, EQ
VR553	EVBJJAJ15G15	V.R, EQ
VR554	EVBJJAJ15G15	V.R, EQ
VR555	EVBJJAJ15G15	V.R, EQ
VR556	EVBJJAJ15G15	V.R, EQ
VR557	EVBJJAJ15G15	V.R, EQ
POSISTORS		
PS601	SRPBD47101	POSISTOR
COILS AND TRANSFORMERS		
L101	RLQZPR47KT-Y	CHOKE COIL
L102	RLQZP1R2KT-Y	CHOKE COIL
L203	ELEPK1R0MA	COIL
L204	ELEPK1R0MA	COIL
L321	SLM1B9-P	MPX COIL
L322	SLM1B9-P	MPX COIL
L324	SLM1B10-M	COIL
L325	RLQZP1R2KT-Y	CHOKE COIL
L601	SLQY07G-40	CHOKE COIL
L602	SLQY07G-40	CHOKE COIL
⚠ L791	SLQX400-D	COIL
⚠ L792	SLQX400-D	COIL
L851	ELEPK1R0MA	COIL
L852	ELEPK1R0MA	COIL
L892	RLQZP101KT-Y	COIL
L893	RLQZP101KT-Y	COIL
L902	RLQZP101KT-Y	COIL
T201	SLI4B511-Z	I.F.TRANSFORMER
T202	SLI4B513-Z	I.F.TRANSFORMER
⚠ T701	SLT5U70-W	POWER TRANSFORMER
⚠ T751	SLT5128	POWER TRANSFORMER
COMPONENT COMBINATIONS		
Z201	SLA2Z1-T	COIL
Z202	SLI7Z101-T	I.F.TRANSFORMER
Z321	SLA4Z13-Z	ANTENNA COIL

Ref. No.	Part No.	Description
Z891	GP1U509M	DIODE, REMOTE SENSOR
Z901	EXFP12331MF	COMPONENT COMBINATION
Z902	EXBF8E473J	CONPONENT COMBINATION
Z903	EXBF9E103J	COMPONENT COMBINATION
Z904	EXBF8E103J	COMPONENT COMBINATION
Z905	EXBF9E103J	COMPONENT COMBINATION
Z951	EXBF10E104J	100KΩ X 10
FILTERS		
CF201	SVFE107MM-A	CERAMIC FILTER
CF201	SVFE107MM-D	CERAMIC FILTER
CF201	SVFE107MM-E	CERAMIC FILTER
CF202	SVFE107MZ-A	CERAMIC FILTER
CF202	SVFE107MZ-D	CERAMIC FILTER
CF202	SVFE107MZ-E	CERAMIC FILTER
CF901	EF0FC4004A4	CERAMIC FILTER
OSCILLATORS		
X101	SVQ49U722-S	CRYSTAL OSCILLATOR
DISPLAYS		
FL901	SADBG541GK	DISPLAY TUBE
FRONT PACKS		
TN101	SNVFE337G01	TUNER PACK
LAMPS		
PL1	SWL126-1	LAMP
FUSES		
⚠ F1	XBA2C12TR0	FUSE
SWITCHES		
S1	EVQQB005R	SW, PRESET TUNING
S2	EVQQB005R	SW, PRESET TUNING
S3	EVQQB005R	SW, PRESET TUNING
S4	EVQQB005R	SW, PRESET TUNING
S5	EVQQB005R	SW, PRESET TUNING
S6	EVQQB005R	SW, PRESET TUNING
S7	EVQQB005R	SW, PRESET TUNING
S8	EVQQB005R	SW, PRESET TUNING
S9	EVQQB005R	SW, PRESET TUNING
S10	EVQQB005R	SW, PRESET TUNING
S11	EVQQB005R	SW, MEMORY/GROUP
S12	EVQQB005R	SW, FM MODE SELECT
S13	EVQQB005R	SW, BAND SELECT(FM)
S14	EVQQB005R	SW, BAND SELECT(AM)
S16	EVQQB005R	SW, TUNIG(MONUAL)
S17	EVQQB005R	SW, TUNIG(AUTE)
S18	EVQQB005R	SW, CHANGE MODE SELECT
S19	EVQQB005R	SW, ASSRT MODE SELECT
S20	EVQQB005R	SW, GROUP SELECT
S21	EVQQB005R	SW, MEMORY
S22	EVQQB005R	SW, LOUDNESS
S23	EVQQB005R	SW, PHONO
S24	EVQQB005R	SW, TUNER
S25	EVQQB005R	SW, CD
S26	EVQQB005R	SW, VCR1
S27	EVQQB005R	SW, VCR2
S601	SSH2137	SW, SP SELECT
⚠ S701	SSH1238	SW, POWER
S702	SSH1193	SW, SP IMPEDANCE
RELAYS		
⚠ RL601	SSY134	RELAY
RL751	SSY140	RELAY

■ SCHEMATIC DIAGRAM OF REMOTE-CONTROL TRANSMITTER

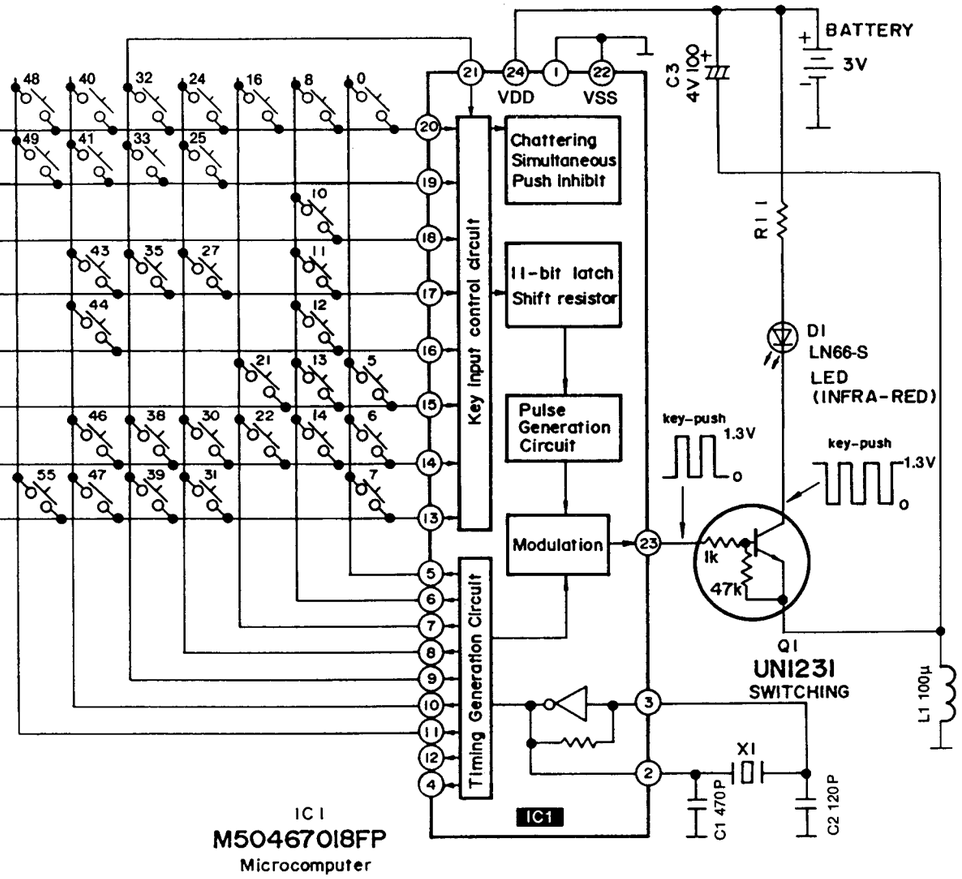

• KEY NUM

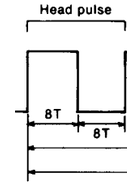

Key No.	
0	CD 5
5	▲ vo
6	Tune
7	Powe
8	CD 6
10	progr
11	CD ▶
12	Deck
13	▼ vo
14	Tune
16	CD 7
21	mutir
22	Tune
24	CD 8
25	CD 1
27	CD ■

■ SCHEMATIC DIAGRAM OF REMOTE-CONTROL TRANSMITTER

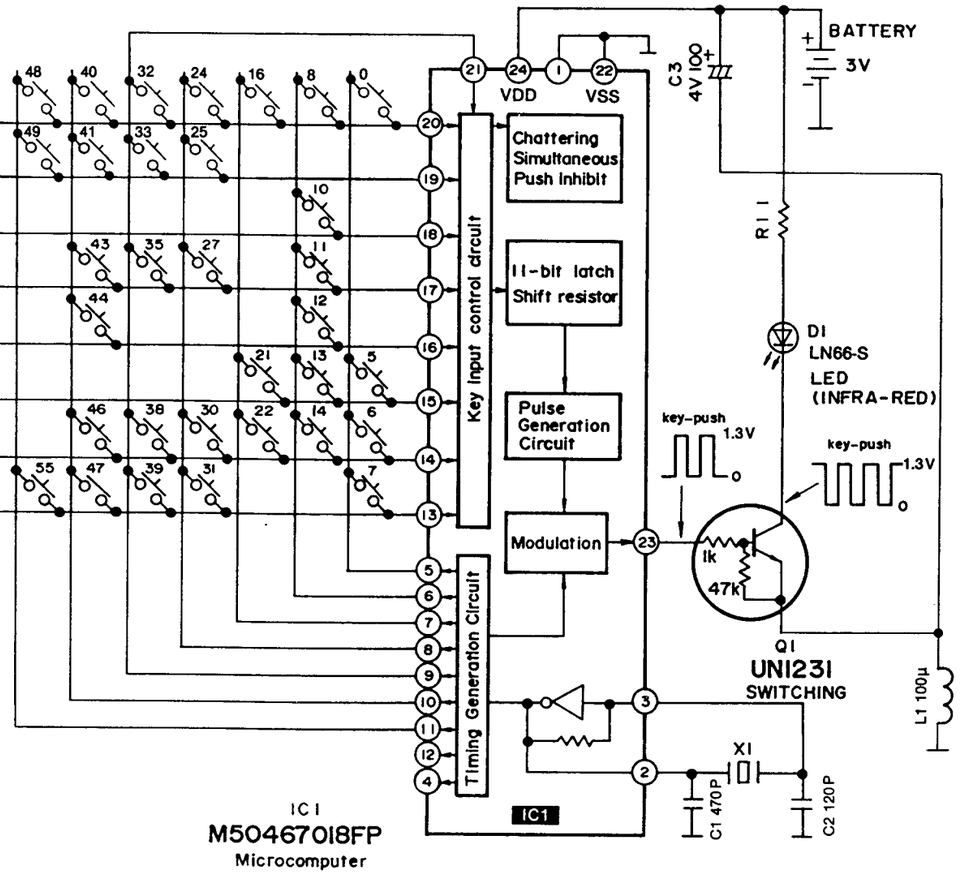

• KEY NUMBER DESCRIPTION AND DATA CODE (Example key No. 21)

fosc=420kHz
fcar=fosc/12
fclk=fcar/16
T=1/fclk

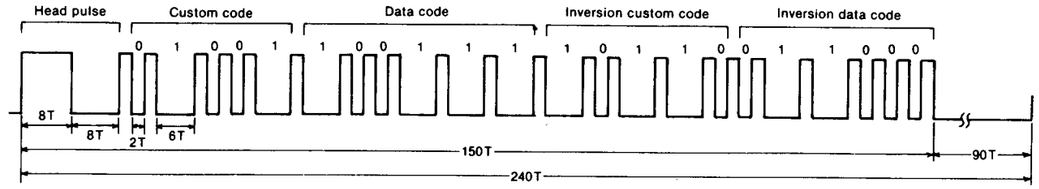

Key No.	Function	Custom code	Data code	Key No.	Function	Custom code	Data code
0	CD 5	01100	010100	30	Tuner 8	01001	010111
5	▲ volume	01001	100100	31	Tuner 1	01001	010000
6	Tuner 5	01001	010100	32	CD 9	01100	011000
7	Power on/off	01001	100000	33	CD 2	01100	010001
8	CD 6	01100	010101	35	CD ⏮ skip	01100	000010
10	program/continue	01100	011101	38	Tuner 9	01001	011000
11	CD ▶ play	01100	001010	39	Tuner 2	01001	010001
12	Deck ▶ play	01001	001010	40	CD 10	01100	011001
13	▼ volume	01001	100101	41	CD 3	01100	010010
14	Tuner 6	01001	010101	43	CD ⏭ skip	01100	000011
16	CD 7	01100	010110	44	Deck ■ stop	01001	000000
21	muting	01001	100111	46	Tuner 10	01001	011001
22	Tuner 7	01001	010110	47	Tuner 3	01001	010010
24	CD 8	01100	010111	48	CD +10	01100	011010
25	CD 1	01100	010000	49	CD 4	01100	010011
27	CD ■ stop	01100	000000	55	Tuner 4	01001	010011

■ BLOCK DIAGRAM

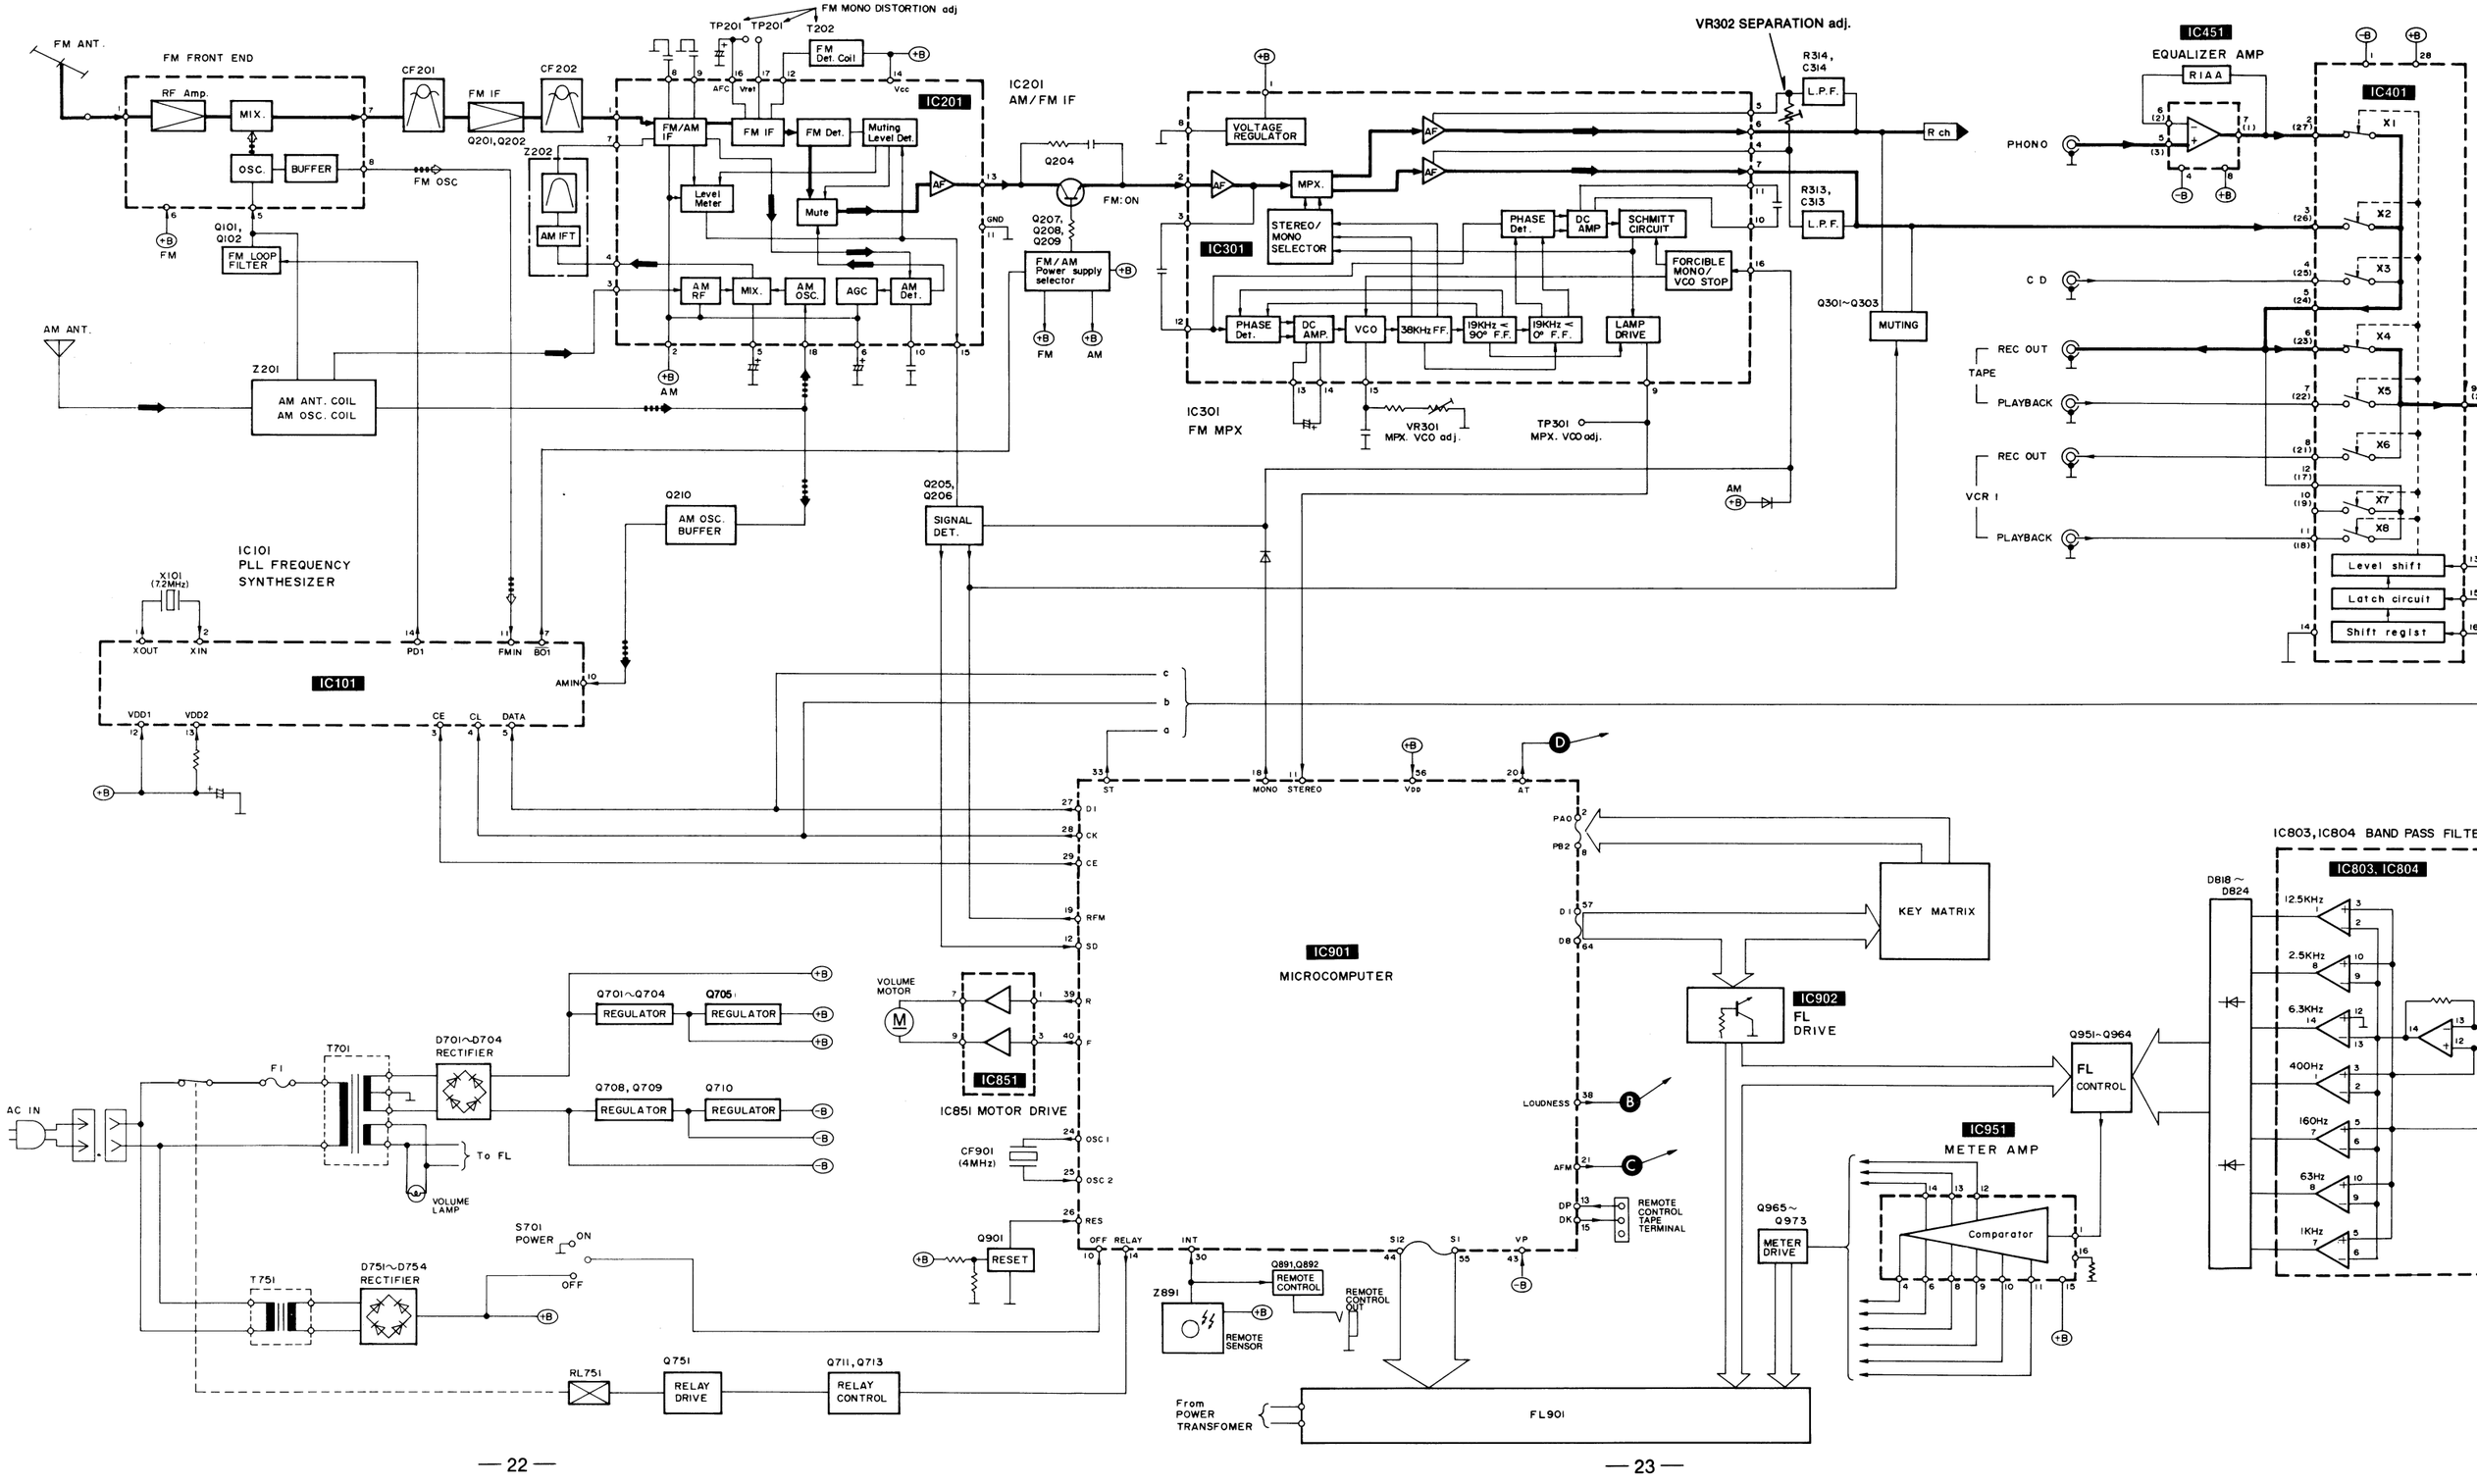

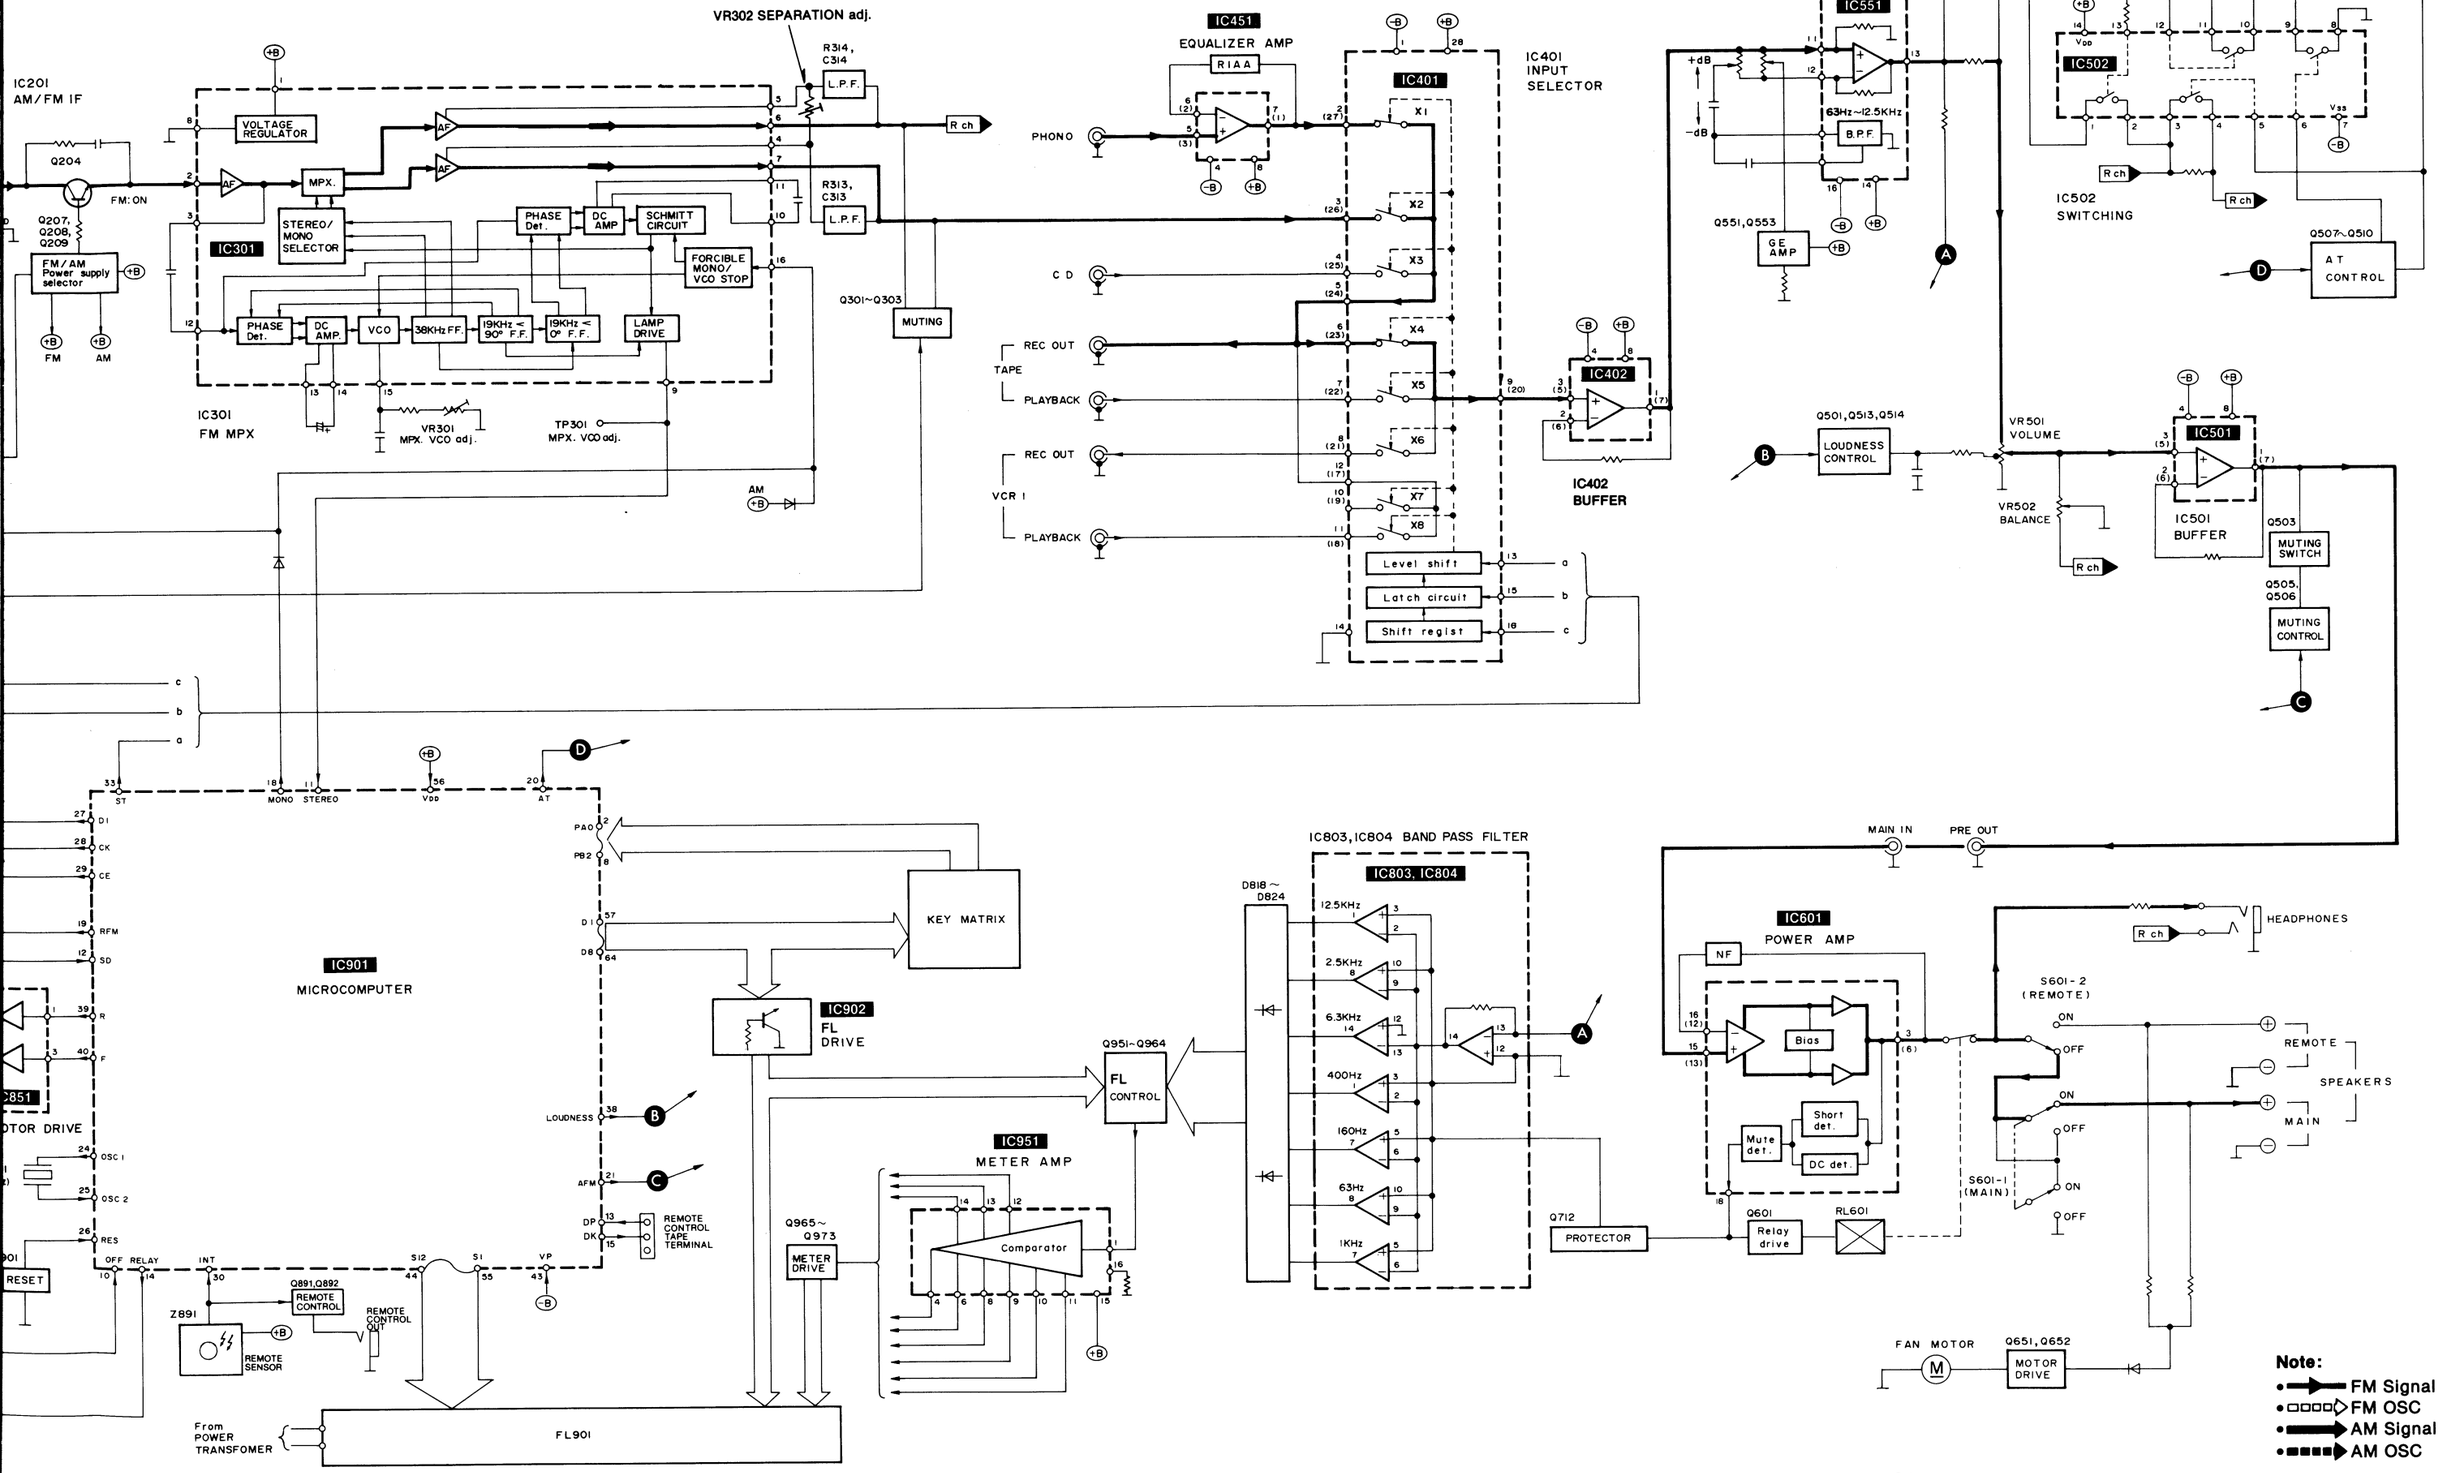
VR302 SEPARATION adj.
R314, C314
L.P.F.
R313, C313
L.P.F.
R ch
IC201
AM/FM IF
Q204
FM: ON
Q207, Q208, Q209
FM/AM Power supply selector
FM
AM
VOLTAGE REGULATOR
AF
MPX.
STEREO/ MONO SELECTOR
IC301
PHASE Det.
DC AMP
SCHMITT CIRCUIT
FORCIBLE MONO/ VCO STOP
PHASE Det.
DC AMP.
VCO
38KHz FF
19KHz = 90° F.F.
19KHz = 0° F.F.
LAMP DRIVE
IC301
FM MPX
VR301
MPX. VCO adj.
TP301
MPX. VCO adj.
AM
Q301~Q303
MUTING
IC451
EQUALIZER AMP
RIAA
PHONO
C D
TAPE
REC OUT
PLAYBACK
REC OUT
VCR I
PLAYBACK
IC401
IC401
INPUT
SELECTOR
X1
X2
X3
X4
X5
X6
X7
X8
Level shift
Latch circuit
Shift regist
a
b
c
IC402
IC402
BUFFER
GE (B.P.F.)
IC551
63Hz~12.5KHz
B.P.F.
+dB
-dB
Q551, Q553
GE AMP
IC502
IC502
SWITCHING
R ch
R ch
Q507~Q510
AT
CONTROL
Q501, Q513, Q514
LOUDNESS CONTROL
VR501
VOLUME
VR502
BALANCE
R ch
IC501
IC501
BUFFER
Q503
MUTING SWITCH
Q505, Q506
MUTING CONTROL
IC901
MICROCOMPUTER
ST
MONO
STEREO
Vdd
AT
PA0
PB2
D1
D8
KEY MATRIX
IC902
FL
DRIVE
Q951~Q964
FL
CONTROL
LOUDNESS
AFM
DP
DK
REMOTE CONTROL TAPE TERMINAL
IC951
METER AMP
Comparator
Q965~ Q973
METER DRIVE
OSC 1
OSC 2
RES
OFF
RELAY
INT
S12
S1
VP
Q891, Q892
REMOTE CONTROL
Z891
REMOTE SENSOR
REMOTE CONTROL OUT
From POWER TRANSFOMER
FL901
IC803, IC804 BAND PASS FILTER
IC803, IC804
D818~ D824
12.5KHz
2.5KHz
6.3KHz
400Hz
160Hz
63Hz
1KHz
Q712
PROTECTOR
MAIN IN
PRE OUT
IC601
POWER AMP
NF
Bias
Short det.
Mute det.
DC det.
Q601
Relay drive
RL601
HEADPHONES
R ch
S601-2 (REMOTE)
S601-1 (MAIN)
ON
OFF
REMOTE
SPEAKERS
MAIN
FAN MOTOR
Q651, Q652
MOTOR DRIVE
Note:
FM Signal
FM OSC
AM Signal
AM OSC

■ DESCRIPTION OF FLUORESCENT DISPLAY

• Grid assignment

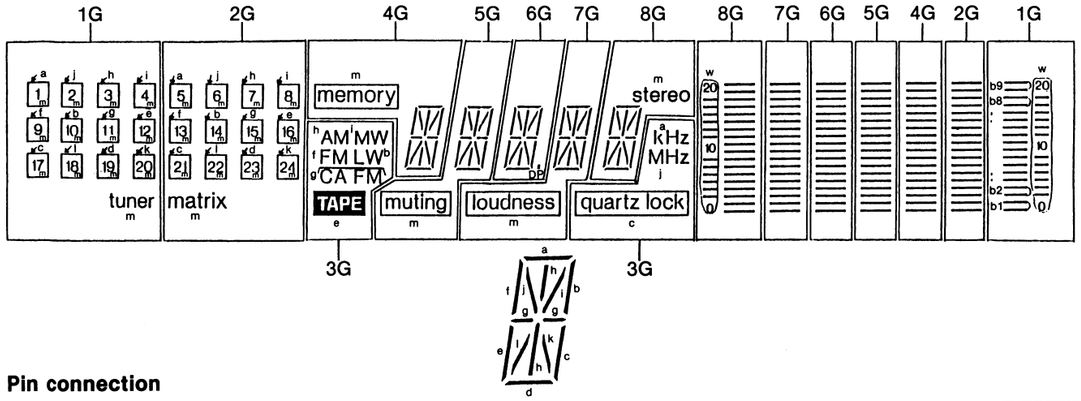

• Pin connection

PIN NO.	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29
CONNECTION	NP	F1	NP	NP	NP	k	d	ℓ	c	e	g	b	f	i	h	j	a	NP	NP	NP	1G	NP	2G	NP	3G	NP	4G	NP	NP	5G	NP	6G	NP	NP	7G

PIN NO.	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
CONNECTION	NP	NP	8G	NP	m	NP	NP	NC	NP	NP	NP	NP	NP	w	n	o	p	q	r	s	t	u	v	NP	NP	NP	F2	NP

• Anode connection

	1G	2G	3G	4G	5G	6G	7G	8G
a	□ 1	□ 5	KHz	a	a	a	a	a
b	□ 10	□ 14	LW	b	b	b	b	b
c	□ 17	□ 21	quartz lock	c	c	c	c	c
d	□ 19	□ 23	-	d	d	d	d	d
e	□ 12	□ 16	TAPE	e	e	e	e	e
f	□ 9	□ 13	FM	f	f	f	f	f
g	□ 11	□ 15	CAFM	g	g	g	g	g
h	□ 3	□ 7	AM	h	h	h	h	h
i	□ 4	□ 8	MW	i	i	i	i	i
j	□ 2	□ 6	MHz	j	j	j	j	j
k	□ 20	□ 24	-	k	k	k	k	k
ℓ	□ 18	□ 22	-	ℓ	ℓ	ℓ	ℓ	ℓ
m	1~4 9~12 17~20 tuner	5~8 13~16 21~24 matrix	-	memory	muting	D.P	loud ness	stereo
n	b1	b1	-	b1	b1	b1	b1	b1
o	b2	b2	-	b2	b2	b2	b2	b2
p	b3	b3	-	b3	b3	b3	b3	b3
q	b4	b4	-	b4	b4	b4	b4	b4
r	b5	b5	-	b5	b5	b5	b5	b5
s	b6	b6	-	b6	b6	b6	b6	b6
t	b7	b7	-	b7	b7	b7	b7	b7
u	b8	b8	-	b8	b8	b8	b8	b8
v	b9	b9	-	b9	b9	b9	b9	b9
w	20~0	-	-	-	-	-	-	20~0

■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

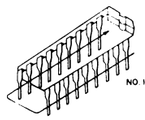

AN6554	14 PIN		
AN6552F	8 PIN	BA6148	16 PIN
AN6558F	8 PIN	M5226P	16 PIN
LM7001	8 PIN	AN90B70	18 PIN
LC4966	14 PIN	AN7273A	18 PIN
AN7470	16 PIN	TC9163N	28 PIN

LC6554H3682 (64 PIN)



SVI3205 (18 PIN)

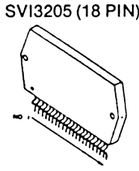

BA6218 (9 PIN)



2SC1384, 2SA933, 2SC1740, 2SA684, 2SC2631, 2SC2603



2SA1309, 2SC2785 2SC2787, 2SC3311 2SD1450



2SK117 2SJ40CD 2SK381



UN4111, UN4113

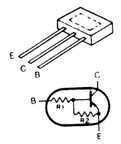

UN4211, UN4213



UN4115

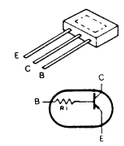

UN4215

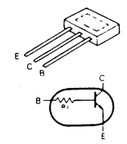

SVDS3V20, MA165 1SR35200, MA29WA

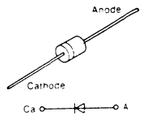

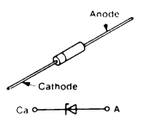

MA4051M, MA4068M, MA4062M, MA4075M, MA4150M, MA4110M, MA4300M, MA4120M, MA4030M

LN846RP



2SB1187, 2SD1761



2SC684



■ PRINTED CIRCUIT BOARDS

F FL METER DRIVE/ GRAPHIC EQUALIZER AMP P.C.B.

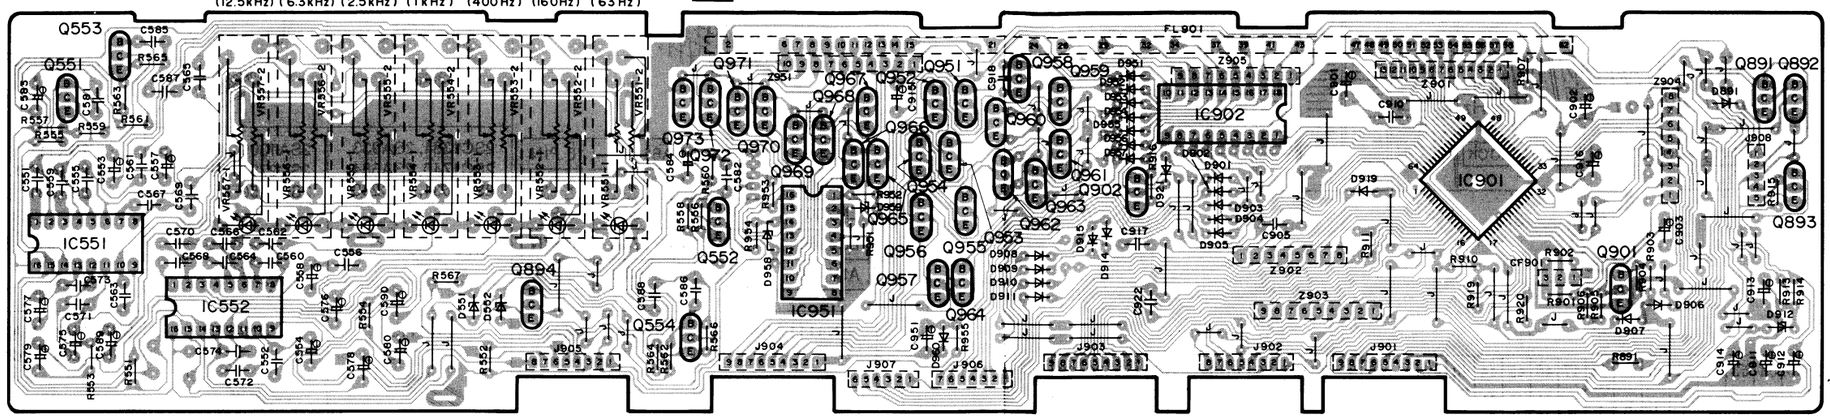

C INPUT/OUTPUT TERMINAL P.C.B.

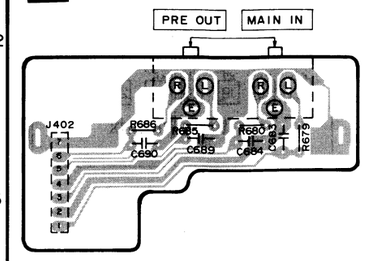

I POWER SWITCH/ SPEAKER SWITCH/ HEADPHONES JACK P.C.B.

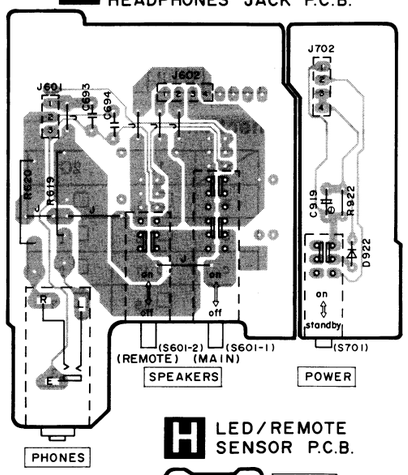

G OPERATION SWITCH P.C.B.

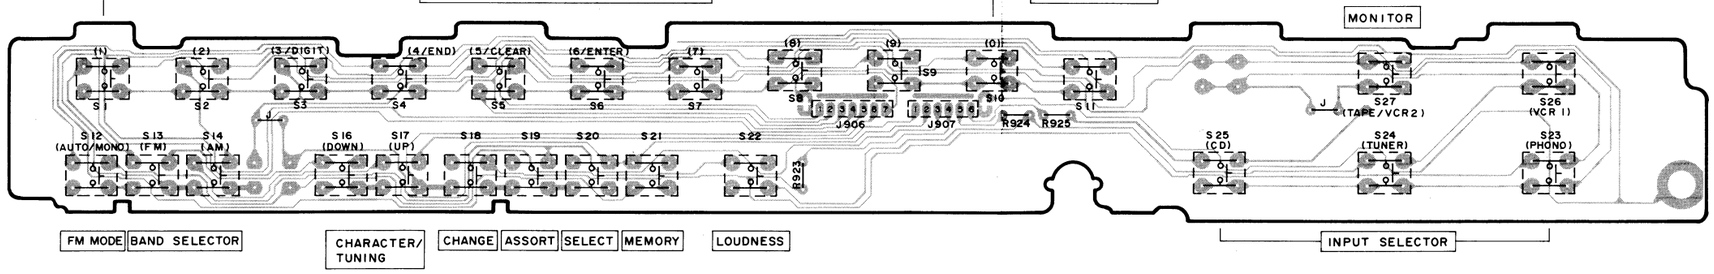

H LED/REMOTE SENSOR P.C.B.

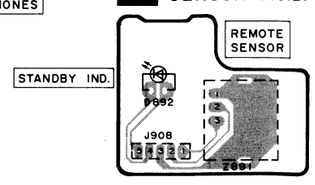

A TUNER (FM/AM) P.C.B.

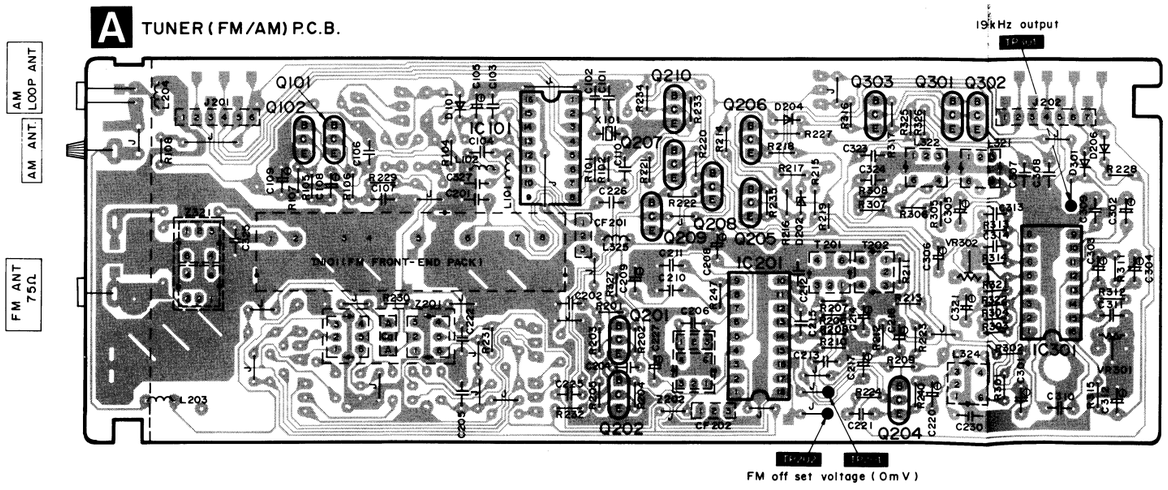

E VOLUME/ MOTOR DRIVE P.C.B.

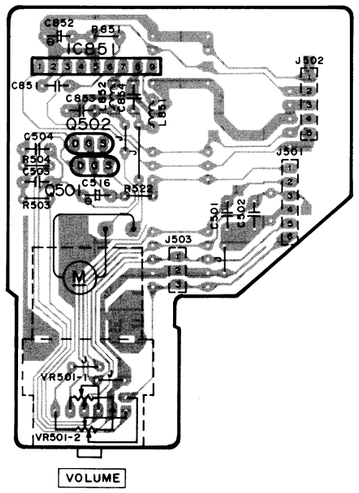

K AC IN TERMINAL P.C.B.

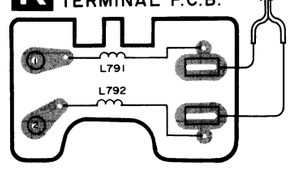

D BALANCE VR P.C.B.

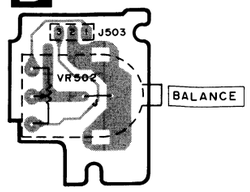

■ WIRING C

GND
PHONO
CD
TAPE/VCR2 (REC OUT) (PLAYBACK)
VCR I (REC OUT) (PLAYBACK)
REMOTE CONTROL (TAPE)
REMOTE CONTROL (OUT)
SPEAKERS
SPEAKER IMPEDANCE (S702)
REMOTE MAIN

B MAIN(PHONO EQUALIZER/INPUT SELECTOR/B.P. FILTER AMP/ POWER AMP/POWER SOURCE) P.C.B.

IC451 IC401 IC402 IC501 IC502 IC601 IC803 IC804
Q501 Q502 Q503 Q504 Q505 Q506 Q507 Q508 Q509 Q510 Q513 Q514
Q701 Q702 Q703 Q704 Q705 Q708 Q709 Q710 Q711 Q712 Q713 Q751 Q752
Q601 Q651 Q652
RLY601 RLY751
T701 POWER TRANSFORMER
T751
J201 J202 J204 J402 J501 J601 J602 J651 J701 J702 J703 J705 J708 J901 J902 J903 J904 J905

T701
POWER TRANSFORMER
F1 T1.25A
T751
C791
RLY751
Q751
J708
D751 D752 D753 D754 D755
J701
J703
PROTECT
J908

J POWER SOURCE/ RELAY DRIVE P.C.B.

AC IN (220V 50/60Hz)
K AC IN TERMINAL P
BLU
BLN
BRN
J701
T701
POWER TRANSFORMER
J POWER SOURCE/ RELAY DRIVE P.C.B.
J703
PROTECT
J908
J702
J602
S601-1
S601-2
S701
POWER
SPEAKERS
I POWER SWITCH/ SPEAKER SWITCH/ HEADPHONES JACK P.C.B.
S12 S13 S14
S1 S2 S3

15 16 17 18 19 20

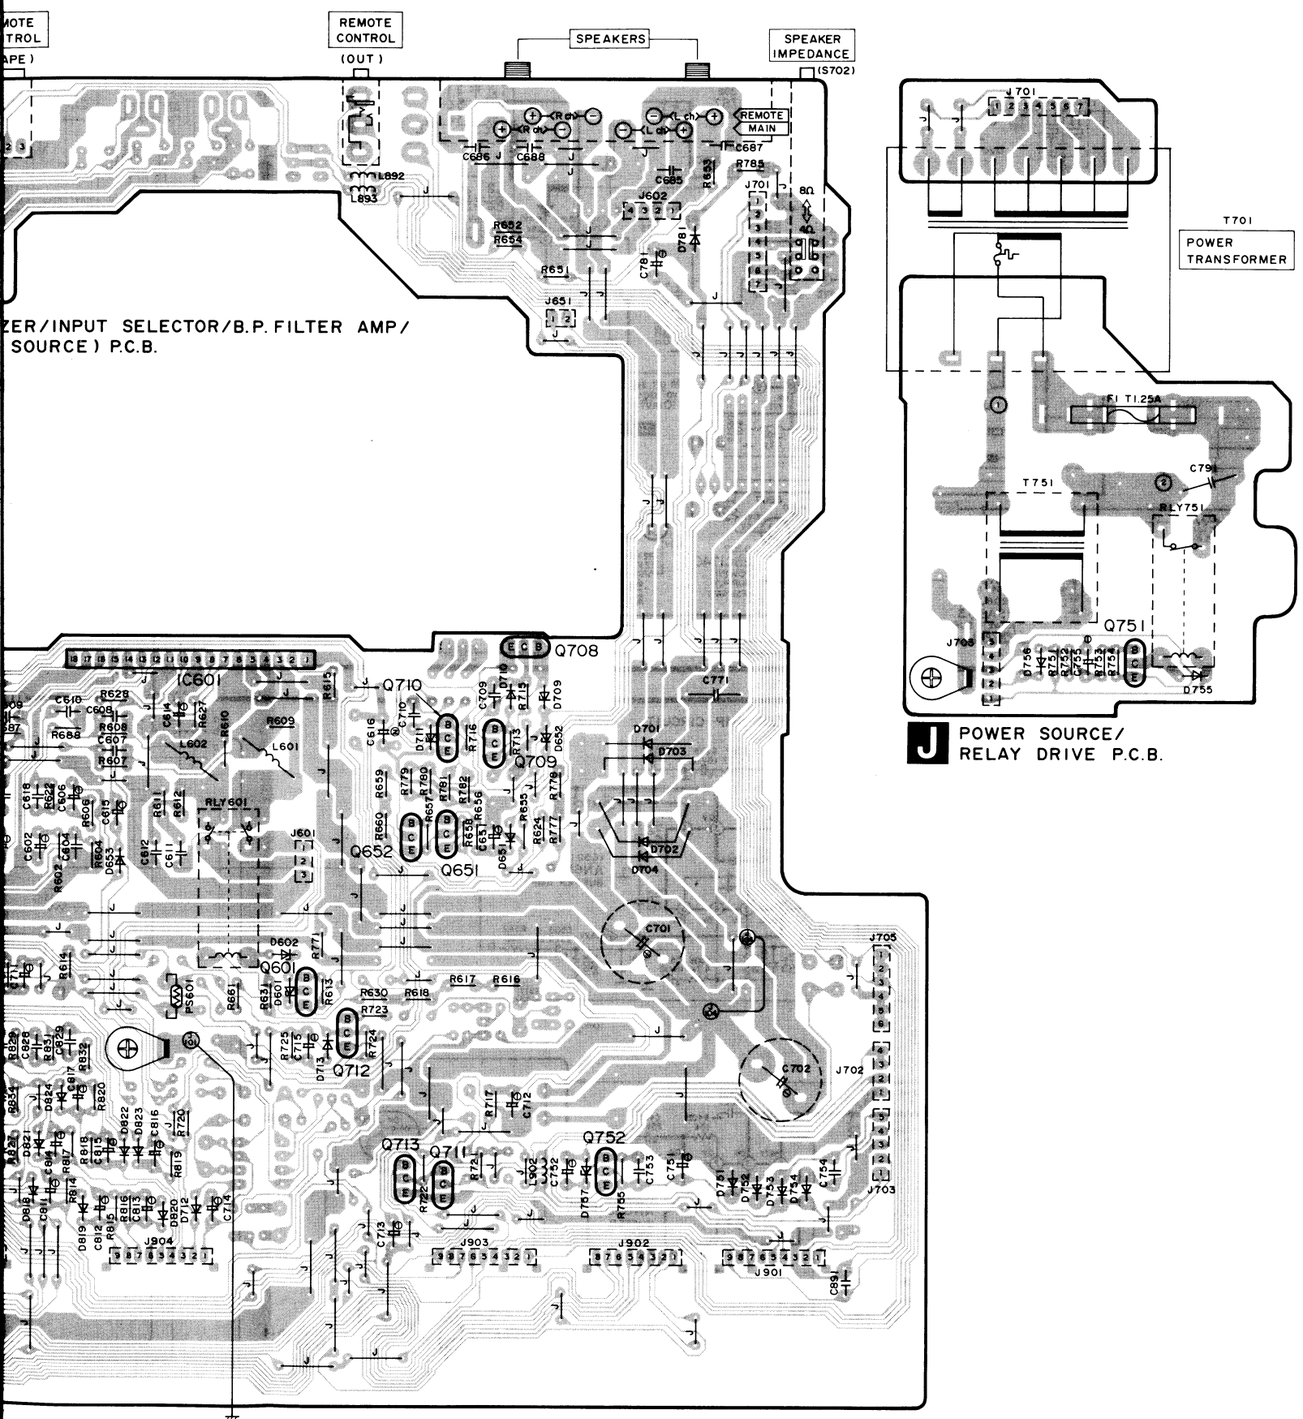

■ WIRING CONNECTION DIAGRAM

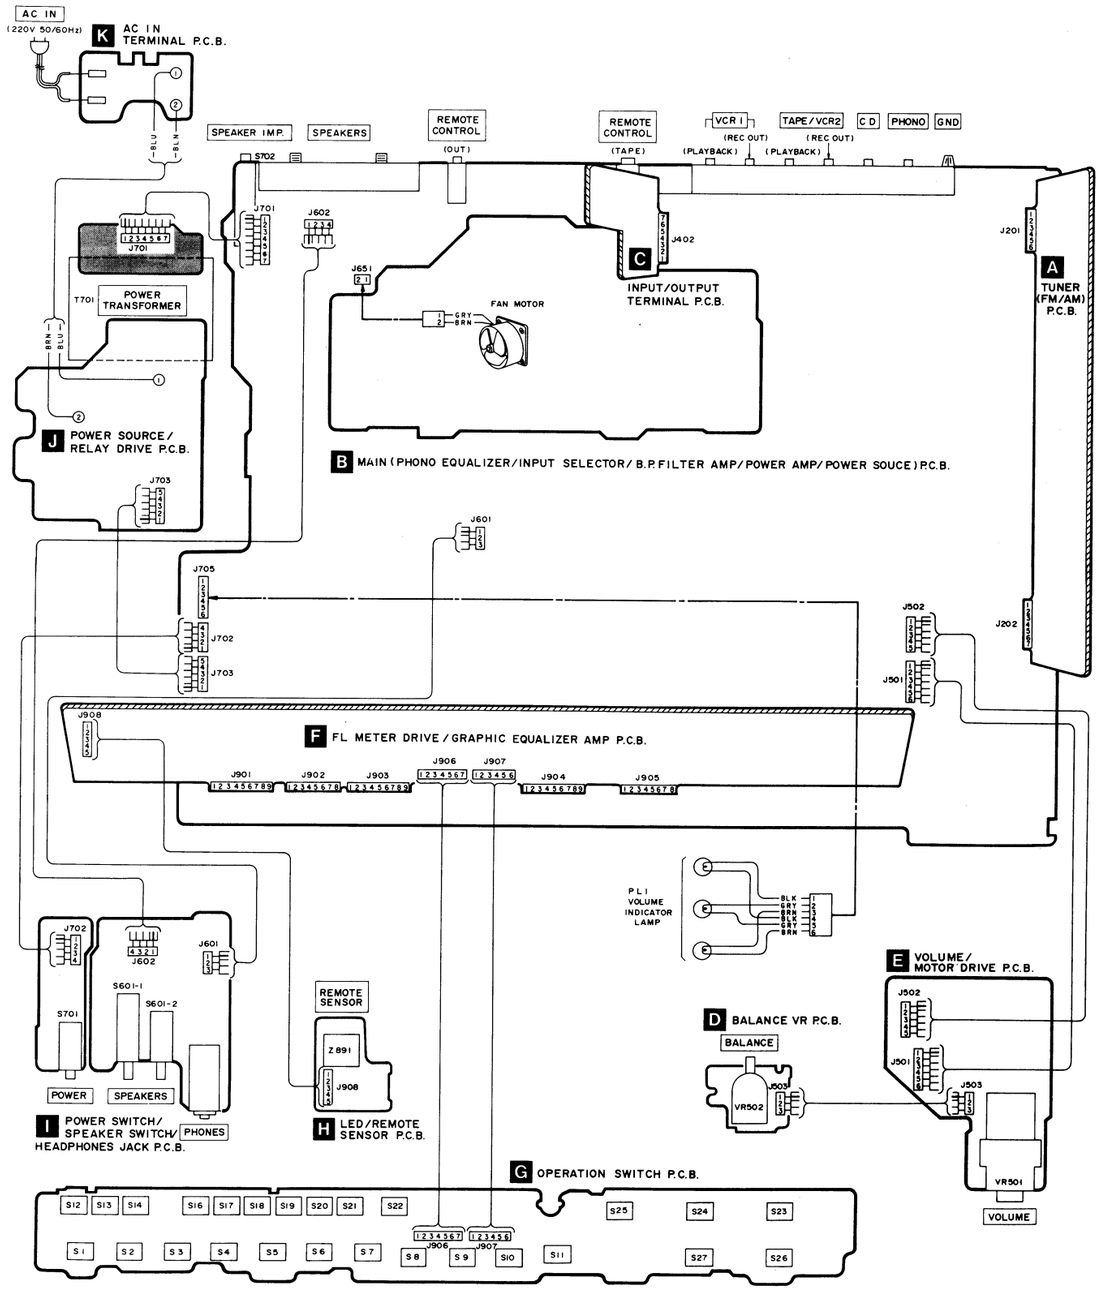

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology)

Note 1:

- **S1～S10** : Preset tuning switches.
  [S1: 1, S2: 2, S3: 3, S4: 4, S5: 5, S6: 6, S7: 7, S8: 8, S9: 9, S10: 0]
- **S11** : Memory-scan/group-search switch.
- **S12** : FM mode select switch. (AUTO↔MONO)
- **S13, S14** : Band selectors.
  S13: FM, S14: AM
- **S16, S17** : Character-input/tuning switches.
  S16: manual, S17: auto
- **S18** : Change-mode selector.
- **S19** : Assort-mode selector.
- **S20** : Group select switch.
- **S21** : Memory switch.
- **S22** : Loudness switch.
- **S23～S27** : Input selector switches.
  [S23: phono, S24: tuner, S25: CD, S26: VCR1, S27: tape/VCR2]
- **S601-1, S601-2** : Speaker selectors.
  S601-1: main, S601-2: remote
- **S701** : Power switch in "**on**" position.
- **S702** : Speaker impedance selector.
- Signal line
  - : Spectrum analyzer signal
  - : FM signal
  - : FM OSC
  - : AM signal
  - : AM OSC
  - : AF signal (Lch)
  - : Phono signal
  - : Positive voltage lines
  - : Negative voltage lines
- Important safety notice:
  Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts. Indicated voltage values are standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on internal impedance of the DC circuit tester.
- All voltage values shown in circuitry are DC voltage in FM signal (Stereo signal) reception mode.

* Figures in ( ) Stand for DC-voltage in AM signal reception mode

* **Caution**!
IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.

* Cover the parts boxes made of plastics with alminum foil.
* Ground the soldering iron.
* Put a conductive mat on the work table.
* Do not touch the legs of IC or LSI with the fingers directly.

Note2:

• Use of ceramic filters in pairs

The ceramic filters (CF201, CF202) for FM-IF circuit are available in three ranks. For this circuit, be sure to use the ceramics of the same rank in a pair.
At repairing and replacement, pay close attention to the diodes (D914, D915) for use as different diodes must be used depending on each rank of the ceramic filters.

Color marking (Red, Black or White)



RANK (Color)	D914	D915	CENTER FREQUENCY
Black	○	×	10.65MHz
Red	×	×	10.70MHz
White	×	○	10.75MHz

Note: ○ mark: Diode is used.
× mark: Diode is not used.

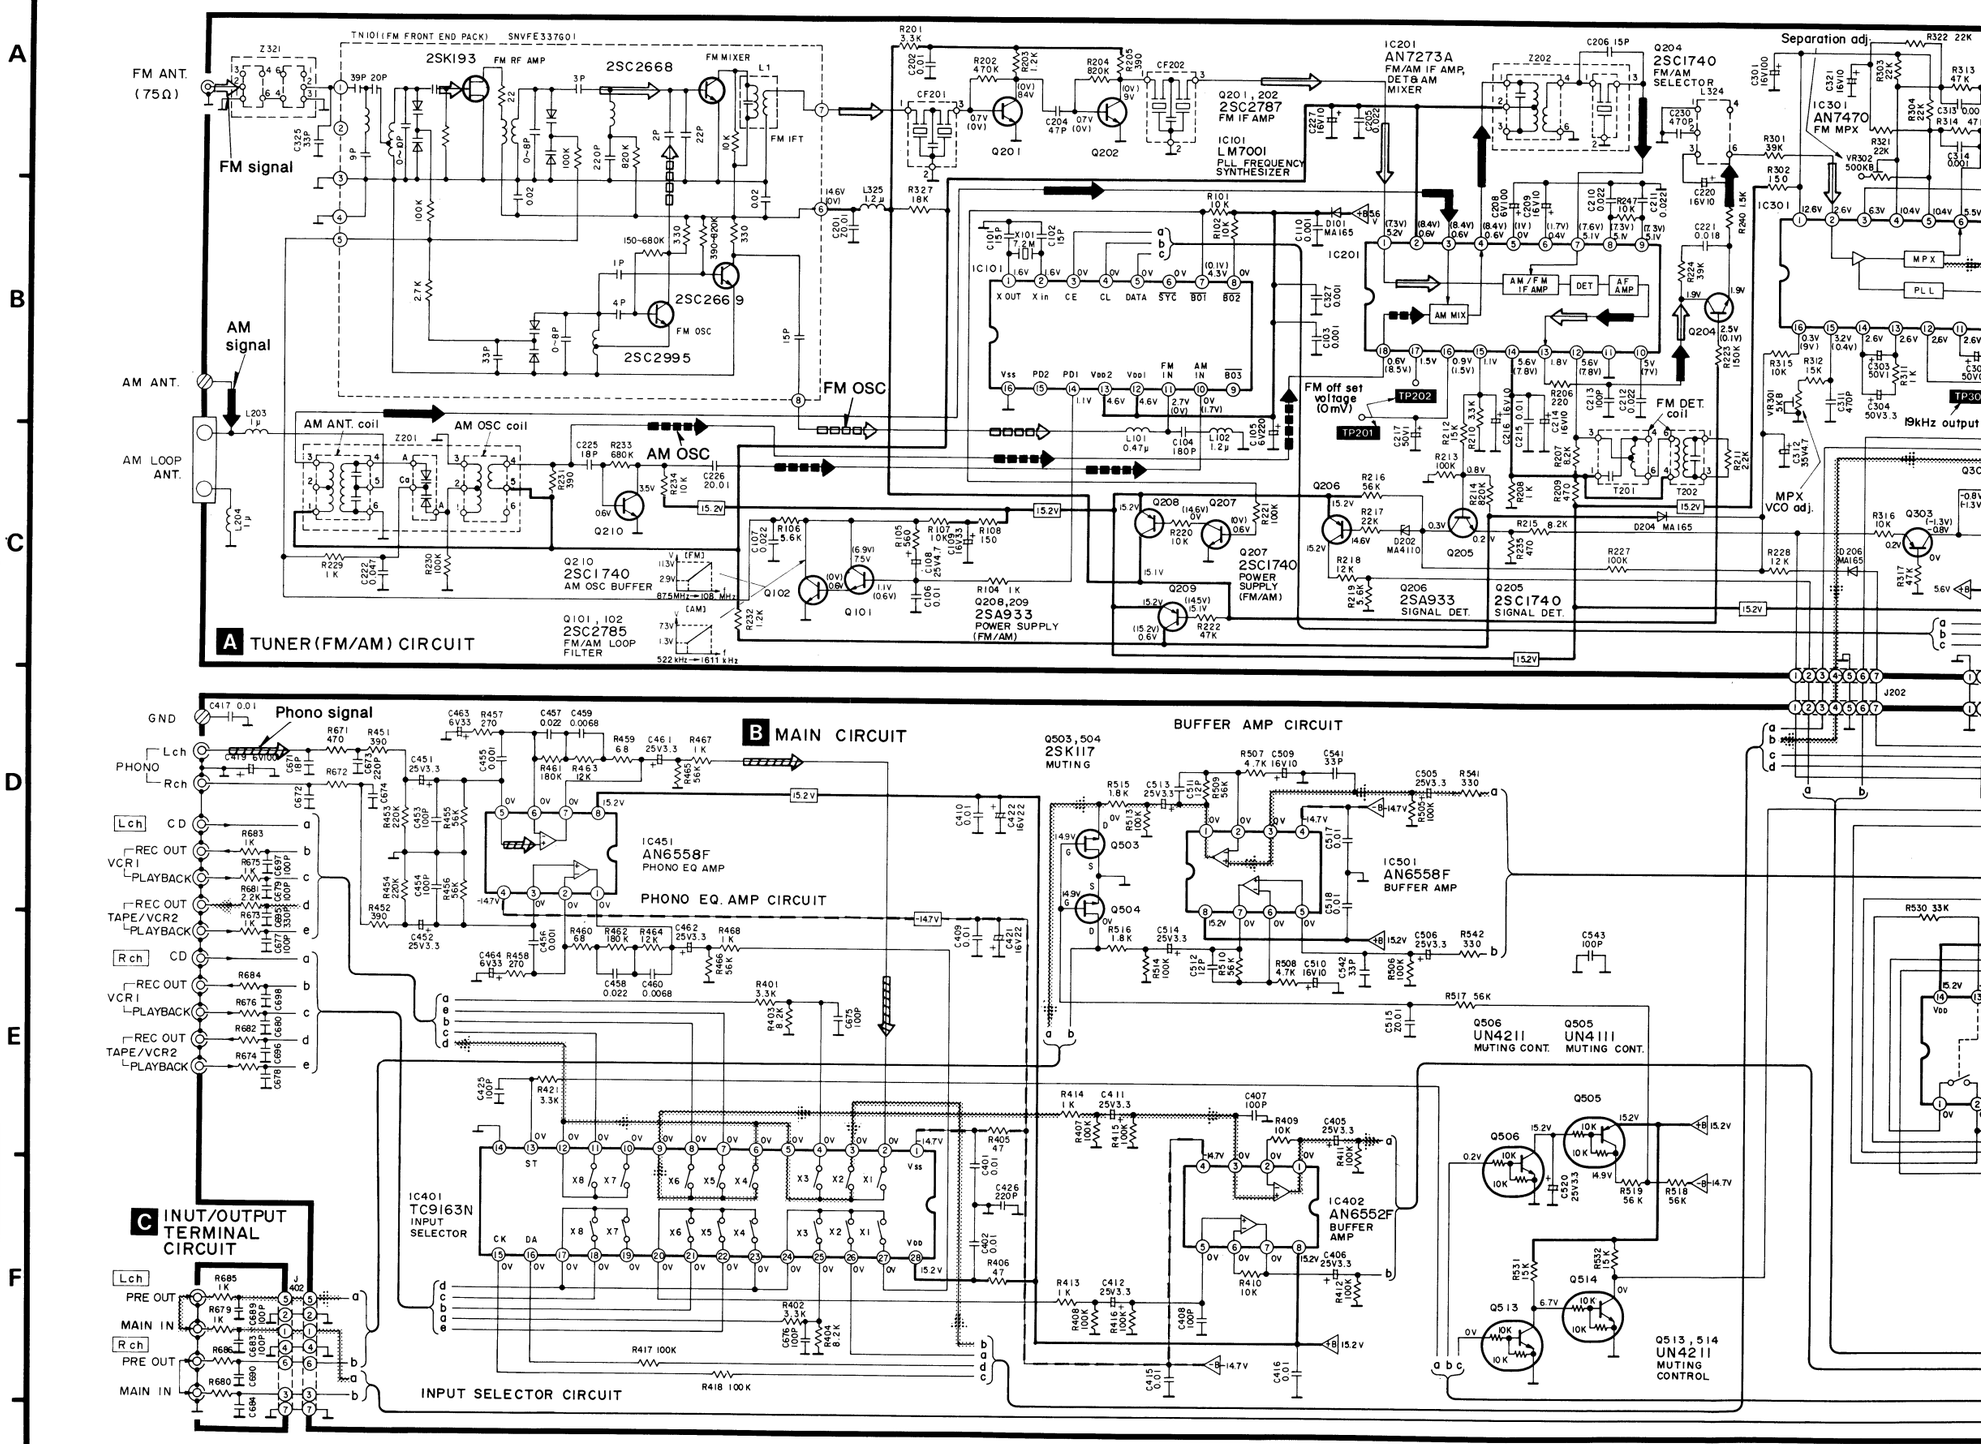

3 4 5 6 7 8 9 10 11 12

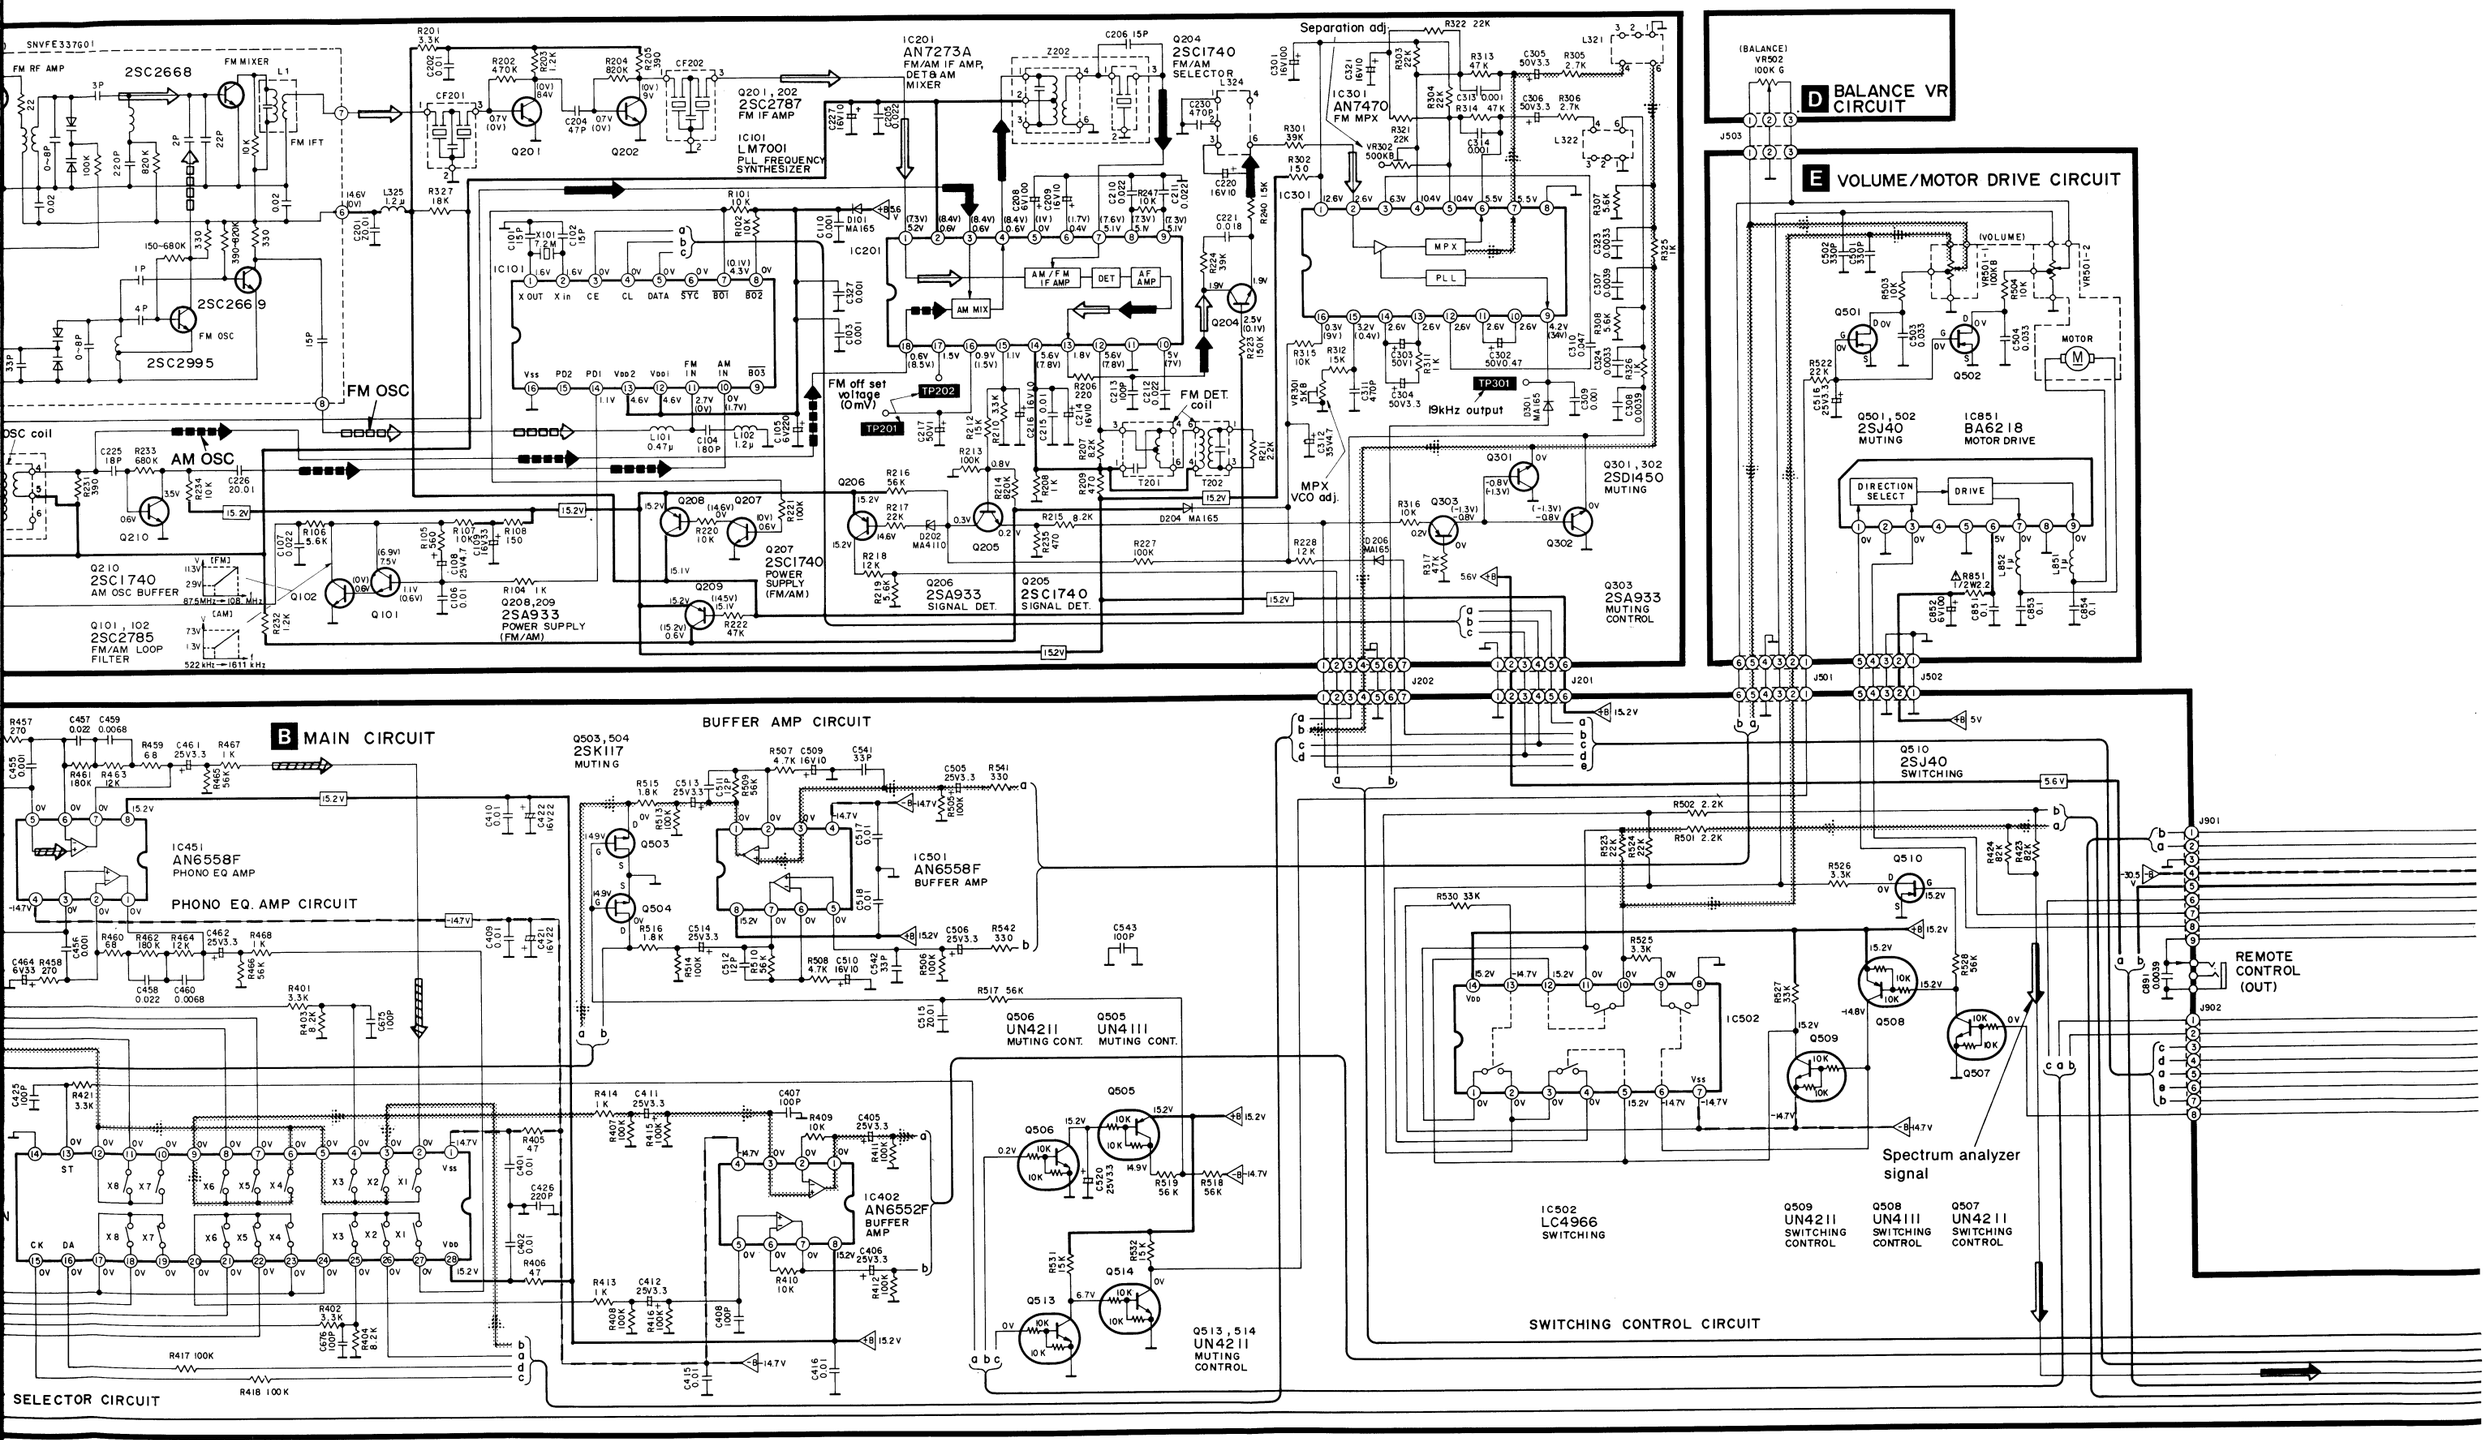

F FL METER DRIVE/ GRAPHIC EQUALIZER AMP CIRCUIT

SYSTEM CONTROL CIRCUIT

GRAPHIC EQUALIZER AMP CIRCUIT

Q951 ~ 957 UN4115 FL DRIVE (SPECTRUM ANALYZER)

Q958 ~ 964 UN4213 FL DRIVE (SPECTRUM ANALYZER)

D951 ~ 957 MA165

FL901 SAD8G541GK

FL DISPLAY

IC902 AN90B70 INTERFACE

IC951 BA6148 FL DRIVE

COMPARATOR

Q965 ~ 973 UN4115 FL DRIVE

Q902 UN4215 SWITCHING

Q901 2SC1740 SWITCHING (REST)

Q891 UN4113 SWITCHING (REMOTE)

Q892 UN4215 SWITCHING (REMOTE)

Q893 UN4215 SWITCHING

IC901 LC6554H3682 MICRO COMPUTER

CF901 4MHz

Z901 330P x 12

Z902 100K x 7

Z903 10K x 8

Z904 10K x 7

Z905 10K x 8

Z951 100K x 9

D901 D902 D903 D904 D905

D908 D909 D910 D911

D912 MA4068

D914 D915 D919 MA165

D921 MA165

D906 MA165

D907 MA165

D891 MA165

D892 LN846RP-LS (STANDBY)

Z891

REMOTE CONTROL (TAPE)

J901 J902 J903 J904 J905 J906 J907 J908

L892 100μ

L893 100μ

G OPERATION SWITCH CIRCUIT

S16 (down) S17 (up) S20 (select) S19 (assort) S18 (change)

S13 (FM) S14 (AM) S12 (FM mode) S11 (AM scan) S22 (loudness)

S9 (9) S10 (0) S21 (memo)

S5 (5) S6 (6) S7 (7) S8 (8) S27 (TAPE/VCR2) S26 (VCR1)

S1 (1) S2 (2) S3 (3) S4 (4) S23 (PHONO) S24 (TUNER) S25 (CD)

H LED/REMOTE SENSOR CIRCUIT

IC552 M5226P B.P. FILTER AMP

IC551 M5226P B.P. FILTER AMP

Q551 ~ 554 2SC2603 B.P. FILTER AMP

Q894 UN4215 LED DRIVE

63Hz 160Hz 400Hz 1kHz 2.5kHz 6.3kHz 12.5kHz

22 23 24 25 26 27 28 29 30 31

GRAPHIC EQUALIZER AMP CIRCUIT

IC552
M5226P
B.P. FILTER AMP

IC552 (R ch)

IC551 (L ch)

Q552 Q554 Q551 Q553

Q894

D894
IN4215
LED DRIVE

(KNOB LED)

63Hz 160Hz 400Hz 1kHz 2.5kHz 6.3kHz 12.5kHz

SPECTRUM ANALYZER B.P.F. AMP CIRCUIT

IC803
AN6554
SPECTRUM ANALYZER B.P.F.

IC804
AN6554
SPECTRUM ANALYZER B.P.F.

D818 ~ 824
MA165

POWER AMP CIRCUIT

IC601
SV13205
POWER AMP

MUTE DET

AC DET

Q712
2SA1309A
SWITCHING

MOTOR DRIVE CIRCUIT

FAN MOTOR

Q652
2SA1309A
MOTOR DRIVE

Q651
2SC3311
MOTOR DRIVE

Q701, 702
2SD1761
REGULATOR

Q705
2SC1384
REGULATOR

Q703, 704
2SC2631
REGULATOR

Q710
2SB1185
REGULATOR

Q708
2SB1187
REGULATOR

Q709
2SC2631
REGULATOR

POWER SOURCE CIRCUIT

Q601
2SA684
RELAY DRIVE

Q711
UN4211
SWITCHING

Q713
UN4215
SWITCHING

Q752
2SC1384
REGULATOR

D701 ~ 704
S3V20

D781
ISR35200TB

D751 ~ 754
ISR35200TB

S702
(SPEAKER IMPEDANCE)

PL1
VOLUME INDICATOR LAMP

L ch
MAIN
R ch
SPEAKERS
L ch
REMOTE
R ch

I POWER SWITCH / SPEAKER SWITCH / HEDPHONES JACK CIRCUIT

S601-1 (MAIN)
SPEAKERS
S601-2 (REMOTE)
HEADPHONES
S701 (POWER)

J POWER SOURCE / RELAY DRIVE CIRCUIT

Q751
2SC3311
RELAY DRIVE

K AC IN TERMINAL CIRCUIT

AC 220V (50/60Hz)

■ CABINET PARTS LOCATION

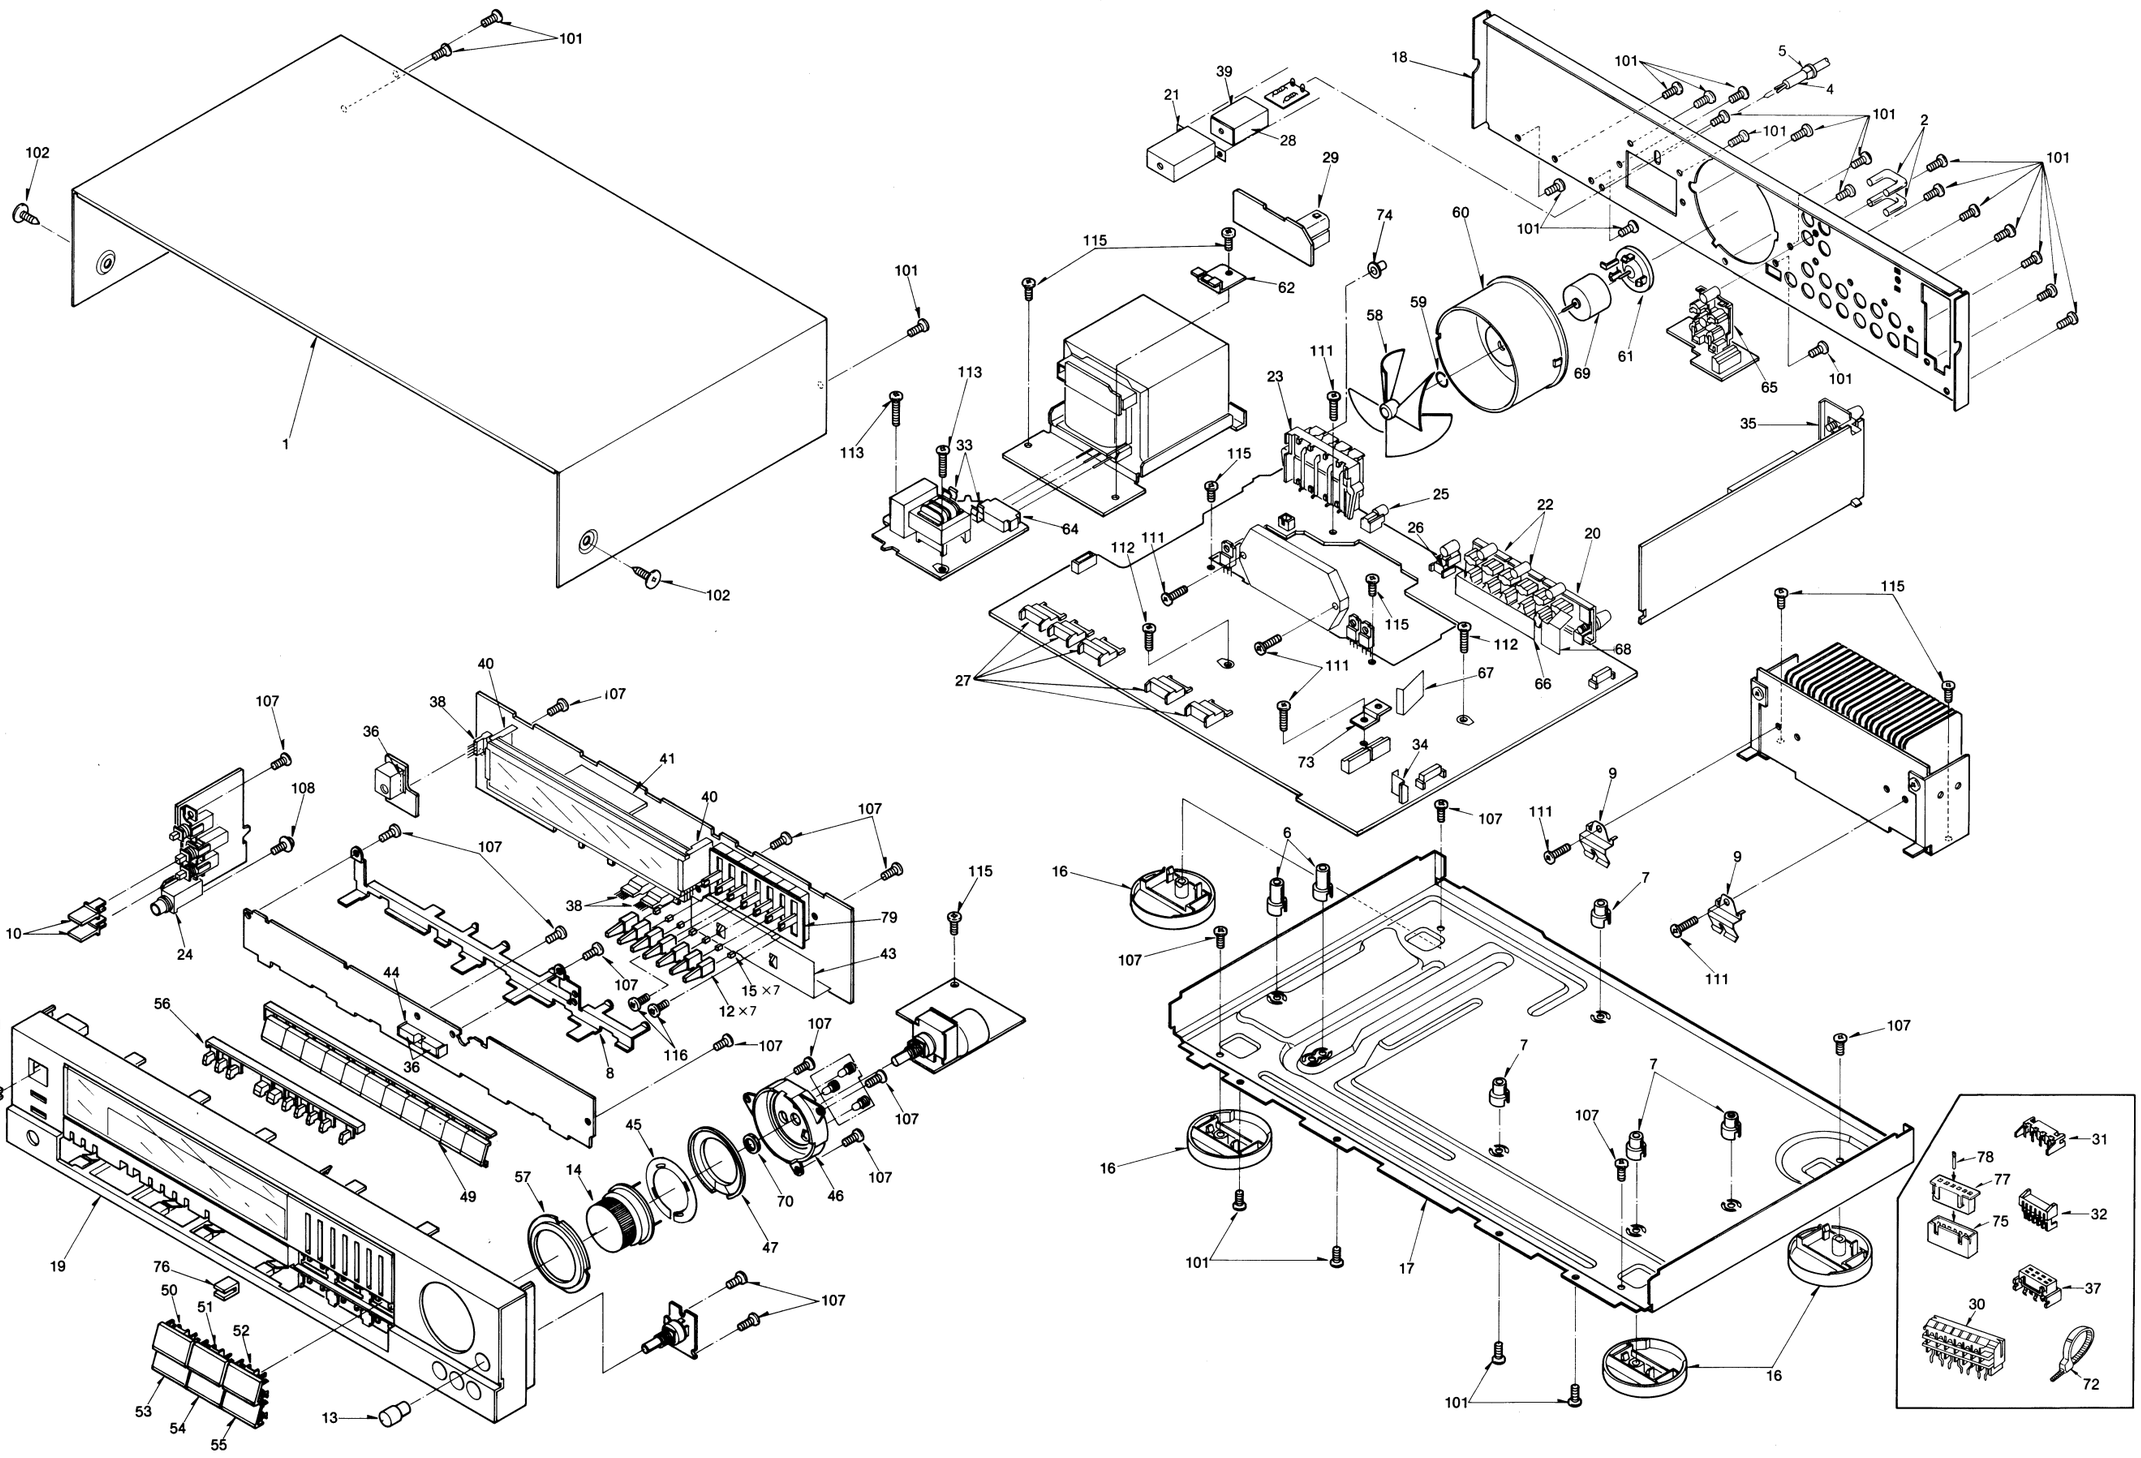

■ REPLACEME

Notes : * Important safety nc
Components identi
manufacturer's spe
* Bracketed indicatio
Parts without these

Ref. No.		Part No.
CABINET AND CHASSIS		
1		SKC1741K993
2		SJP9205-2Y
4	⚠	SJA138-3
5		SHR127
6		SHE181
7		SHE185-1
8		SUW3121
9		SUS894
10		SBC315-7
11		SBC666-5
12		SBDK9
13		SBDM10ZK0A
14		SBN1251
15		SBZK29
16		SKL313
17		SKU11813
18		SGP7410-13A
19		SGYAR330-KE
20		SJF3067NJ
21		SMC1200
22		SJF3069NJ
23		SJF5813-1
24		SJJ134B
25		SJJ141-1
26		SJS306
27		SJS50880WL
27		SJS50980WL
28		SMX891
30		SJT30543-V
30		SJT30640LX-V
30		SJT30743LX-V
31		SJT30645JQ
31		SJT30745JQ
32		SJT30847WL
32		SJT30947WL
33	⚠	SJT390
34		SME103-5
35		SJF8305N
36		SJS50581BB
36		SJS50681BB
36		SJS50781BB
37		SJS50678JQ
37		SJS50778JQ
38		SJT30549BB
38		SJT30648BB
38		SJT30748BB
39		SMX940

Ref. No.	Part No.
PACKING MATERIAL	
P1	SPG6446
P2	SPS5174
P3	SPS5175
P5	SPP699
P6	SPSD152

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice :
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
Parts without these indications can be used for all areas.

Ref. No.		Part No.	Description
CABINET AND CHASSIS			
1		SKC1741K993	CABINET BODY
2		SJP9205-2Y	SHORTING PIN
4	⚠	SJA139-3	POWER CORD
5		SHR127	SPACER, POWER CORD
6		SHE181	HOLDER
7		SHE185-1	HOLDER
8		SUW3121	BRACKET
9		SUS894	BRACKET(SPRING)
10		SBC315-7	BUTTON
11		SBC666-5	BUTTON
12		SBDK9	KNOB
13		SBDM10ZK0A	KNOB
14		SBN1251	KNOB
15		SBZK29	SPACER(KNOB)
16		SKL313	FOOT
17		SKU11813	BOTTOM BOARD
18		SGP7410-13A	REAR PANEL
19		SGYAR330-KE	FRONT PANEL
20		SJF3067NJ	TERMINAL BOARD
21		SMC1200	SHIELD COVER
22		SJF3069NJ	TERMINAL BOARD
23		SJF5813-1	TERMINAL BOARD
24		SJJ134B	JACK
25		SJJ141-1	M3 JACK
26		SJS306	REMOTE CONTROL CONNECTOR
27		SJS50880WL	SOCKET(8P)
27		SJS50980WL	SOCKET(9P)
28		SMX891	SHIELD SPACER
30		SJT30543-V	CONNECTOR(5P)
30		SJT30640LX-V	CONNECTOR(6P)
30		SJT30743LX-V	CONNECTOR(7P)
31		SJT30645JQ	CONNECTOR(6P)
31		SJT30745JQ	CONNECTOR(7P)
32		SJT30847WL	CONNECTOR(8P)
32		SJT30947WL	CONNECTOR (9P)
33	⚠	SJT390	FUSE HOLDER
34		SME103-5	SHIELD PLATE
35		SJF8305N	TERMINAL BOARD
36		SJS50581BB	SOCKET(5P)
36		SJS50681BB	SOCKET(6P)
36		SJS50781BB	SOCKET(7P)
37		SJS50678JQ	SOCKET(6P)
37		SJS50778JQ	SOCKET(7P)
38		SJT30549BB	CONNECTOR(5P)
38		SJT30648BB	CONNECTOR(6P)
38		SJT30748BB	CONNECTOR(7P)
39		SMX940	SHIELD PLATE
40		SUW3122	BRACKET
41		SUW3123	BRACKET
43		SMC6465	SHIELD PLATE
44		SMC6466	SHIELD PLATE
45		SHR6080	SMOKE PLATE
46		SDH571	VOLUME ORNAMENT
47		SDL101	SPACER
49		SBC1033A	BUTTON
50		SBC1034A	BUTTON
51		SBC1034B	BUTTON
52		SBC1034C	BUTTON
53		SBC1035	BUTTON
54		SBC1035D	BUTTON
55		SBC1035B	BUTTON
56		SBC1036	BUTTON
57		SGL265-1	INDICATION PLATE
58		SHE232	FAN
59		SUS271	SPRING
60		SHE233-1	FAN CASE
61		SHE234	CAP
62		SUW3132	BRACKET
64		SJS305-1	PT SOCKET
65		SJF3069N	TERMINAL BOARD
66		SMC6472	SHIELD COVER
67		SMC1009	SHIELD PLATE
68		SMC6471	SHIELD PLATE
69		MDN-4RB4MXA	MOTOR
70		XNS7	NUT
72		SHR328	LEAD WIRE CLAMPER
73		SUW3128	BRACKET
74		SBC165	BUTTON, IMPEDANCE
75		SJT3213	CONNECTOR(2P)
75		SJT3611	CONNECTOR(6P)
76		SHR9866	SPACER
77		SJS5215	SOCKET(2P)
77		SJS5629	SOCKET(6P)
78		SJT783	CONTACT
79		SHR5354-1	ORNAMENT
SCREWS,WASHERS AND NUTS			
101		XTBS3+8JFZ1	SCREW
102		SNE2129-3	SCREW
107		XTB3+8G	SCREW
108		XTW3+8T	SCREW
111		XTB3+16JFZ	SCREW
112		XTBS3+16F1	SCREW
113		XTB3+20JFZ	SCREW
115		XTB3+8JFZ	SCREW
116		XSN2+2FZ	SCREW

Ref. No.	Part No.	Description
PACKING MATERIAL		
P1	SPG6446	PACKING CASE
P2	SPS5174	PAD
P3	SPS5175	PAD
P5	SPP699	POLYETHYLENE SHEET
P6	SPSD152	ACCESSORY BOX

Ref. No.	Part No.	Description
ACCESSORIES		
A2	SSA270M	FM ANTENNA
A3	SQF13357	INSTRUCTION BOOK
A4	SWKST11M-1	CORD (REMOTE CONTROL)
A5	SPB1162T	AM LOOP ANTENNA
A6	UM-4NE	BATTERY
A7	SJP2257T	CORD

■ REMOTE-CONTROL PARTS LOCATION

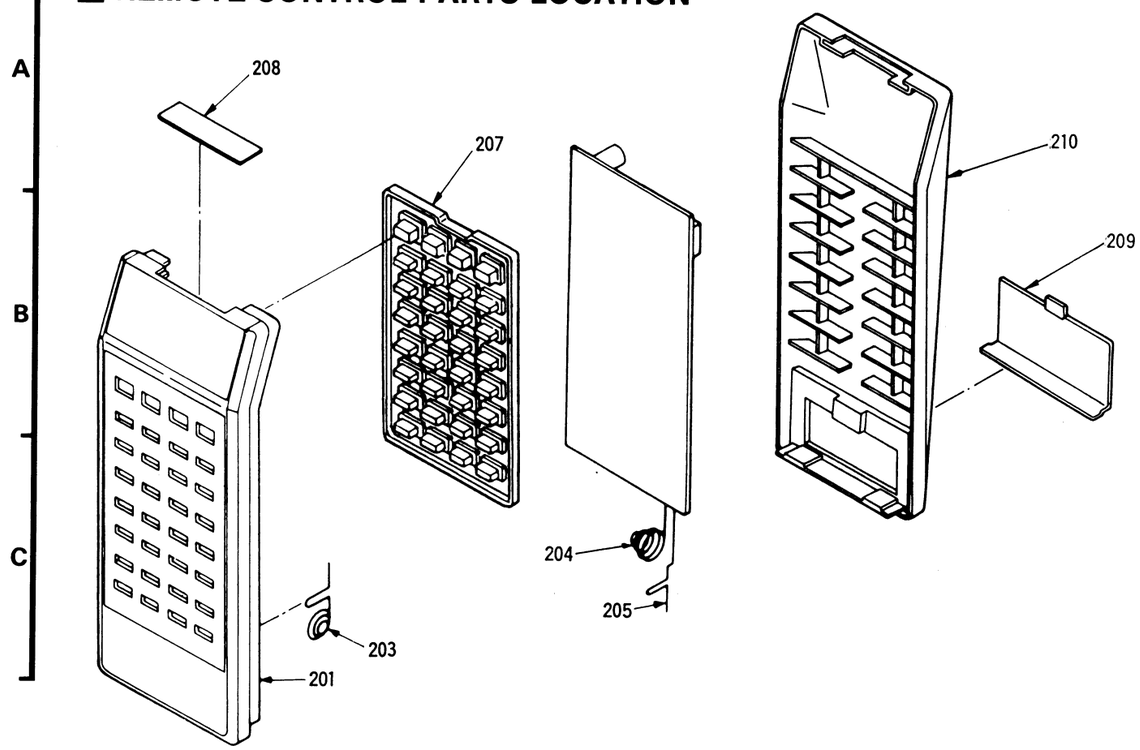

■ REPLACEMENT PARTS LIST

Ref. No.	Part No.	Description
REMOTE CONTROL ASS'Y		
RC1	EUR64758	REMOTE CONTROLL
REMOTE CONTROLL		
INTEGRATED CIRCUITS		
IC1	M50467018FP	I.C, MICRO COMPUTER
TRANSISTORS		
Q1	UN1231	TRANSISTOR
DIODES		
D1	LN66-S	L.E.D
D2	MA154WK	DIODE
D3	MA154WK	DIODE
COIL		
L1	ELEA101JA	COIL

Ref. No.	Part No.	Description
OSCILLATOR		
X1	CSB420PB1	OSCILLATOR
RESISTORS		
R1	ERDS2TJ1R0	CARBON, 1Ω, 1/4W
CAPACITORS		
C1	ECKD1H471KB	CERAMIC, 470PF, 50V
C2	ECKD1H121KB	CERAMIC, 120PF, 50V
C3	ECEA0GK101	ELECTROLYTIC, 100μF, 4V
MECHANISM PARTS		
201	UR64VCS606	UPPER CABINET
203	UR64TD374	BATTERY TERMINAL(COMMON)
204	UR64TD809	TERMINAL(−)
205	UR64TD808	TERMINAL(+)
207	UR64CT805	RUBBER (SWITCH)
208	UR52SB327	PLATE(SMOKE)
209	UR64EC804	BATTERY COVER
210	UR64CS803A	LOWER CABINET

Printed in Japan
H880702100 YY/TK